

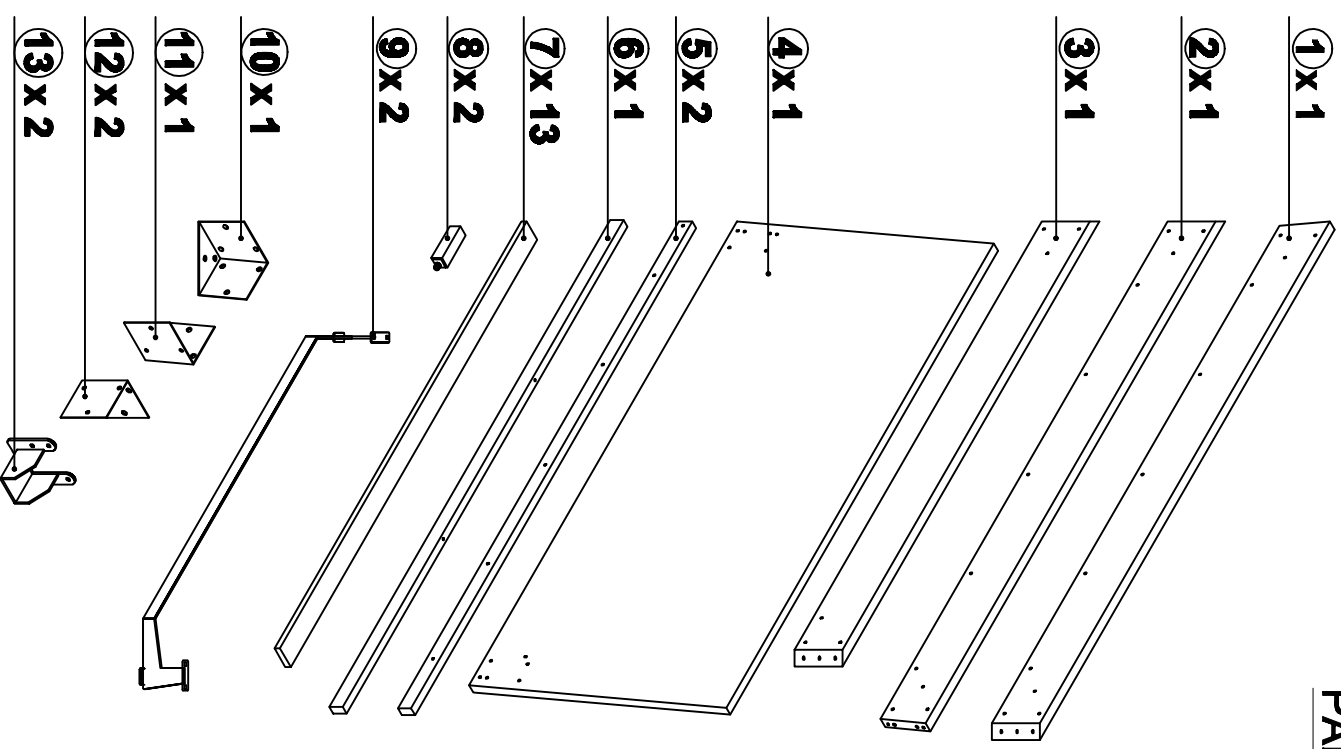


# ASSEMBLY INSTRUCTION BROOME - QUEEN BED







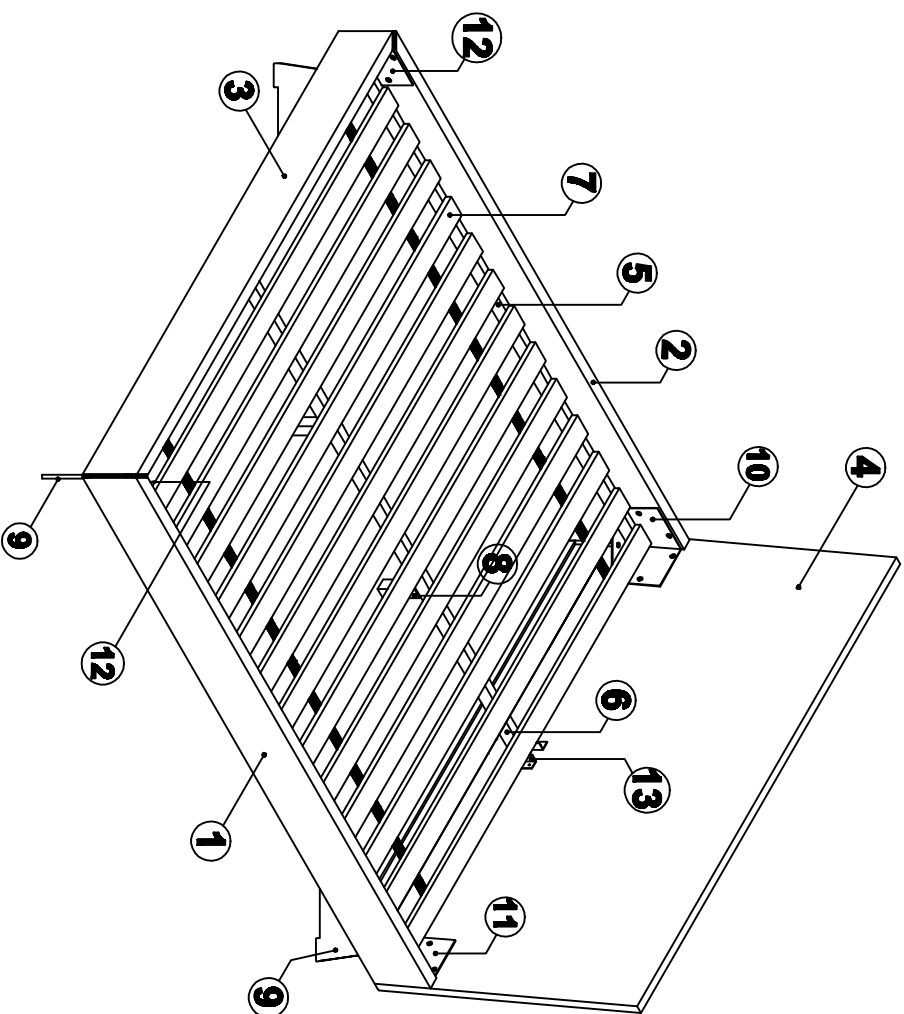


## PARTS


**STEP 1**

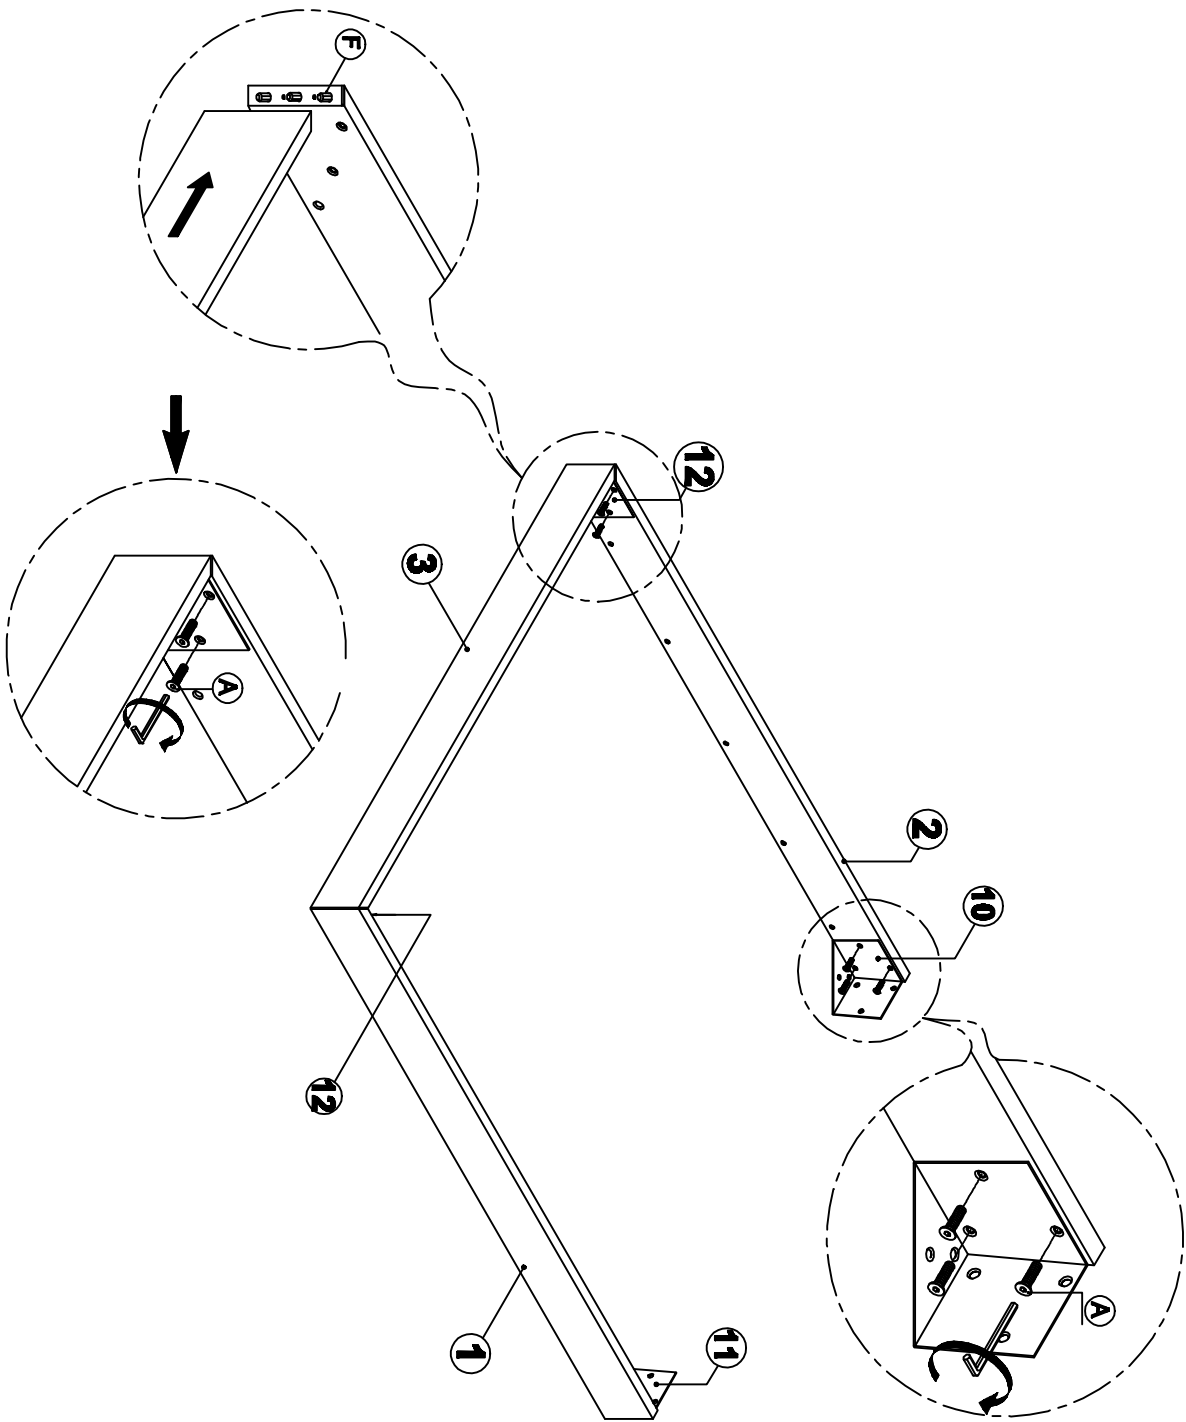


**HARDWARE**

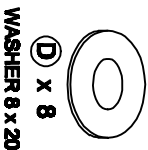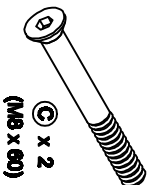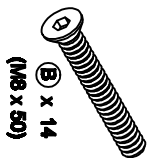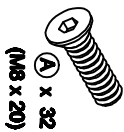


**TOOL**

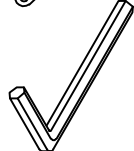


## STEP 2

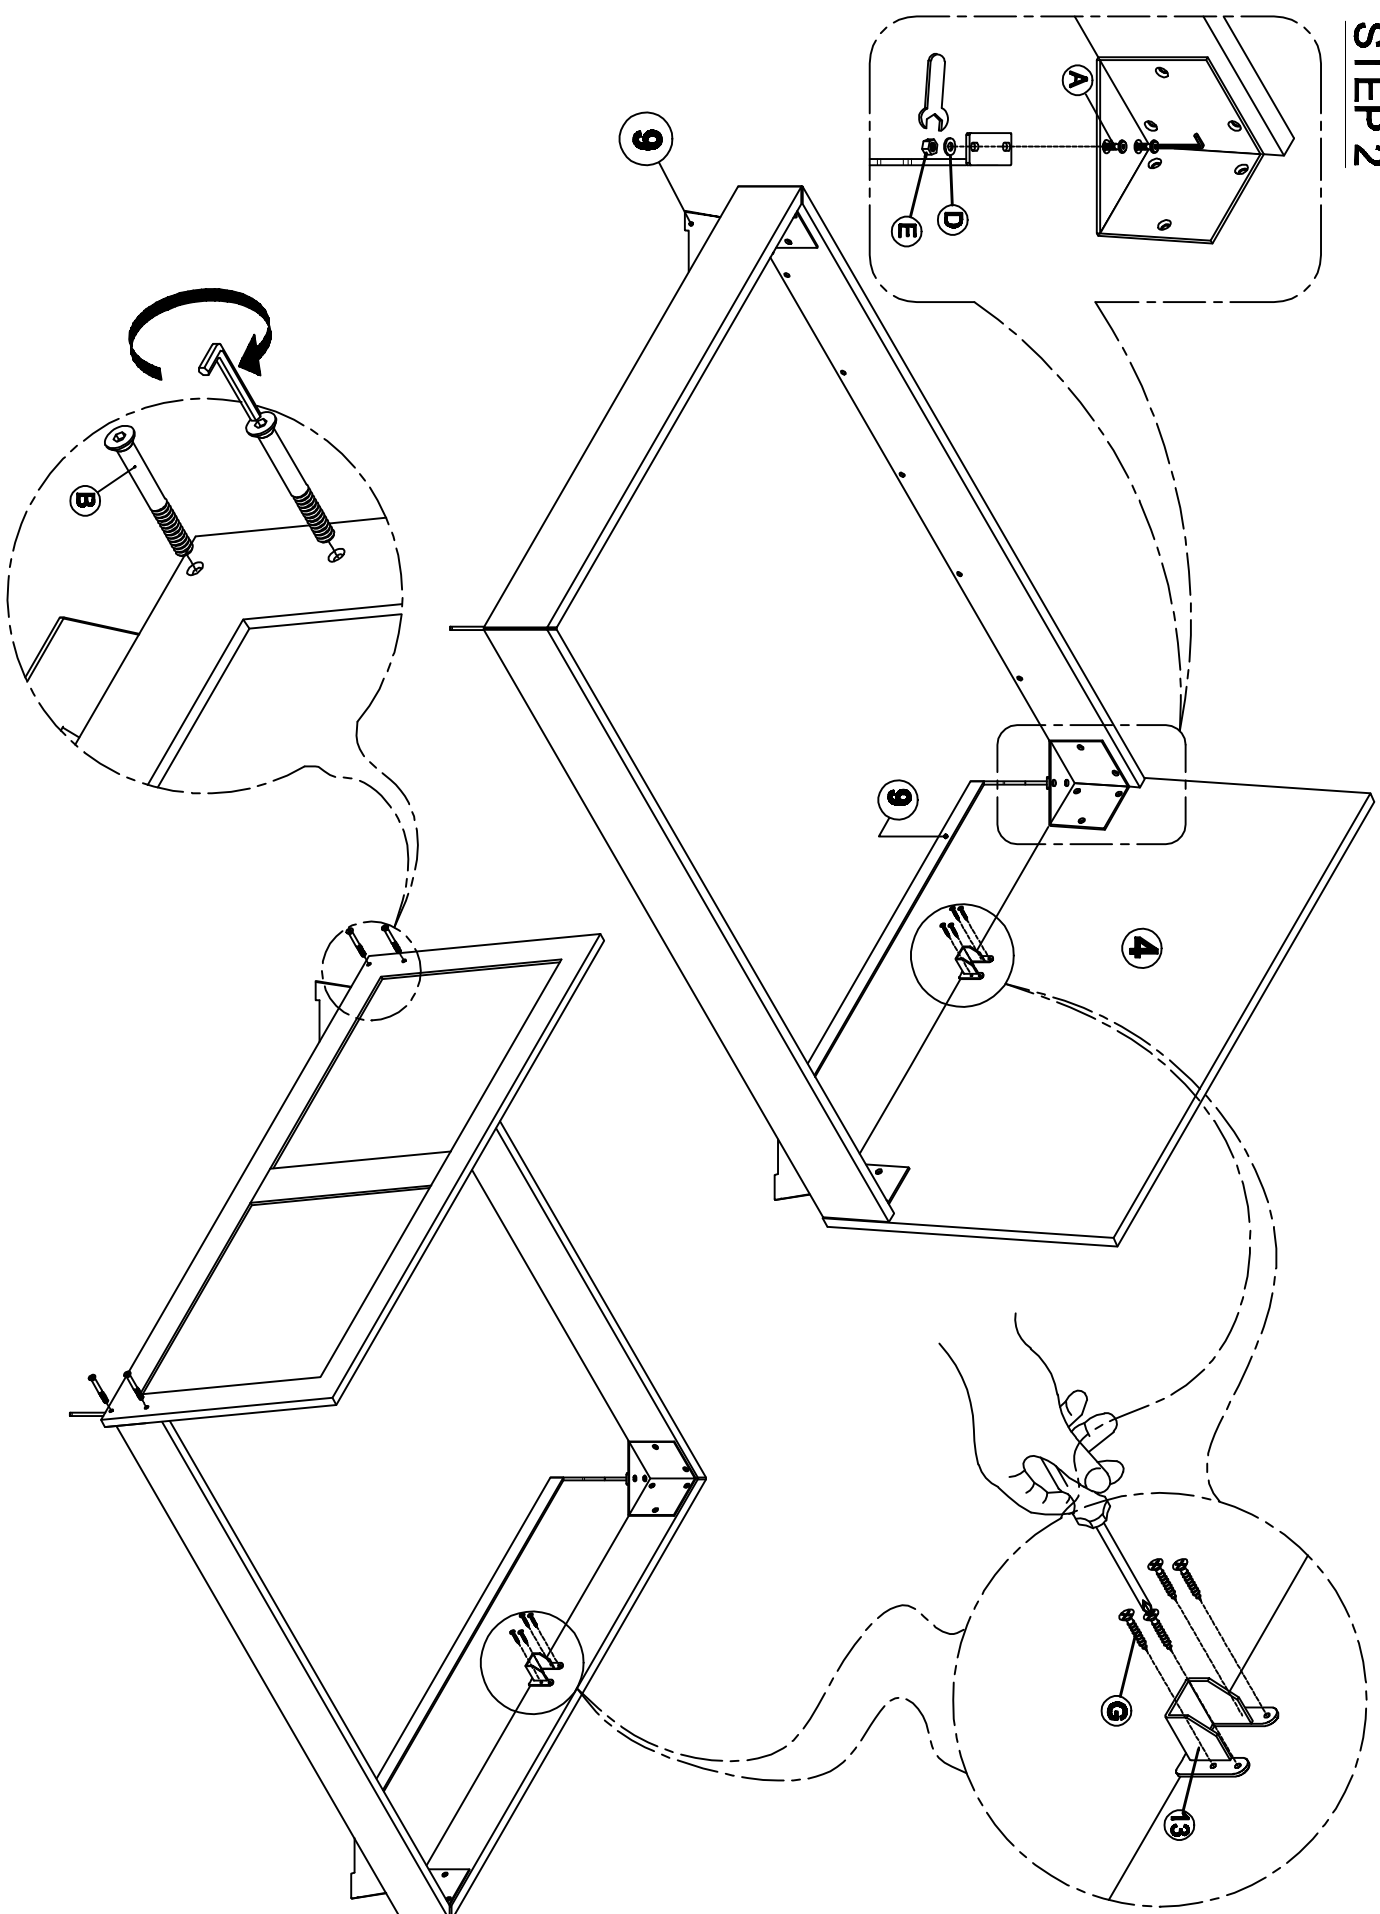


# STEP 3

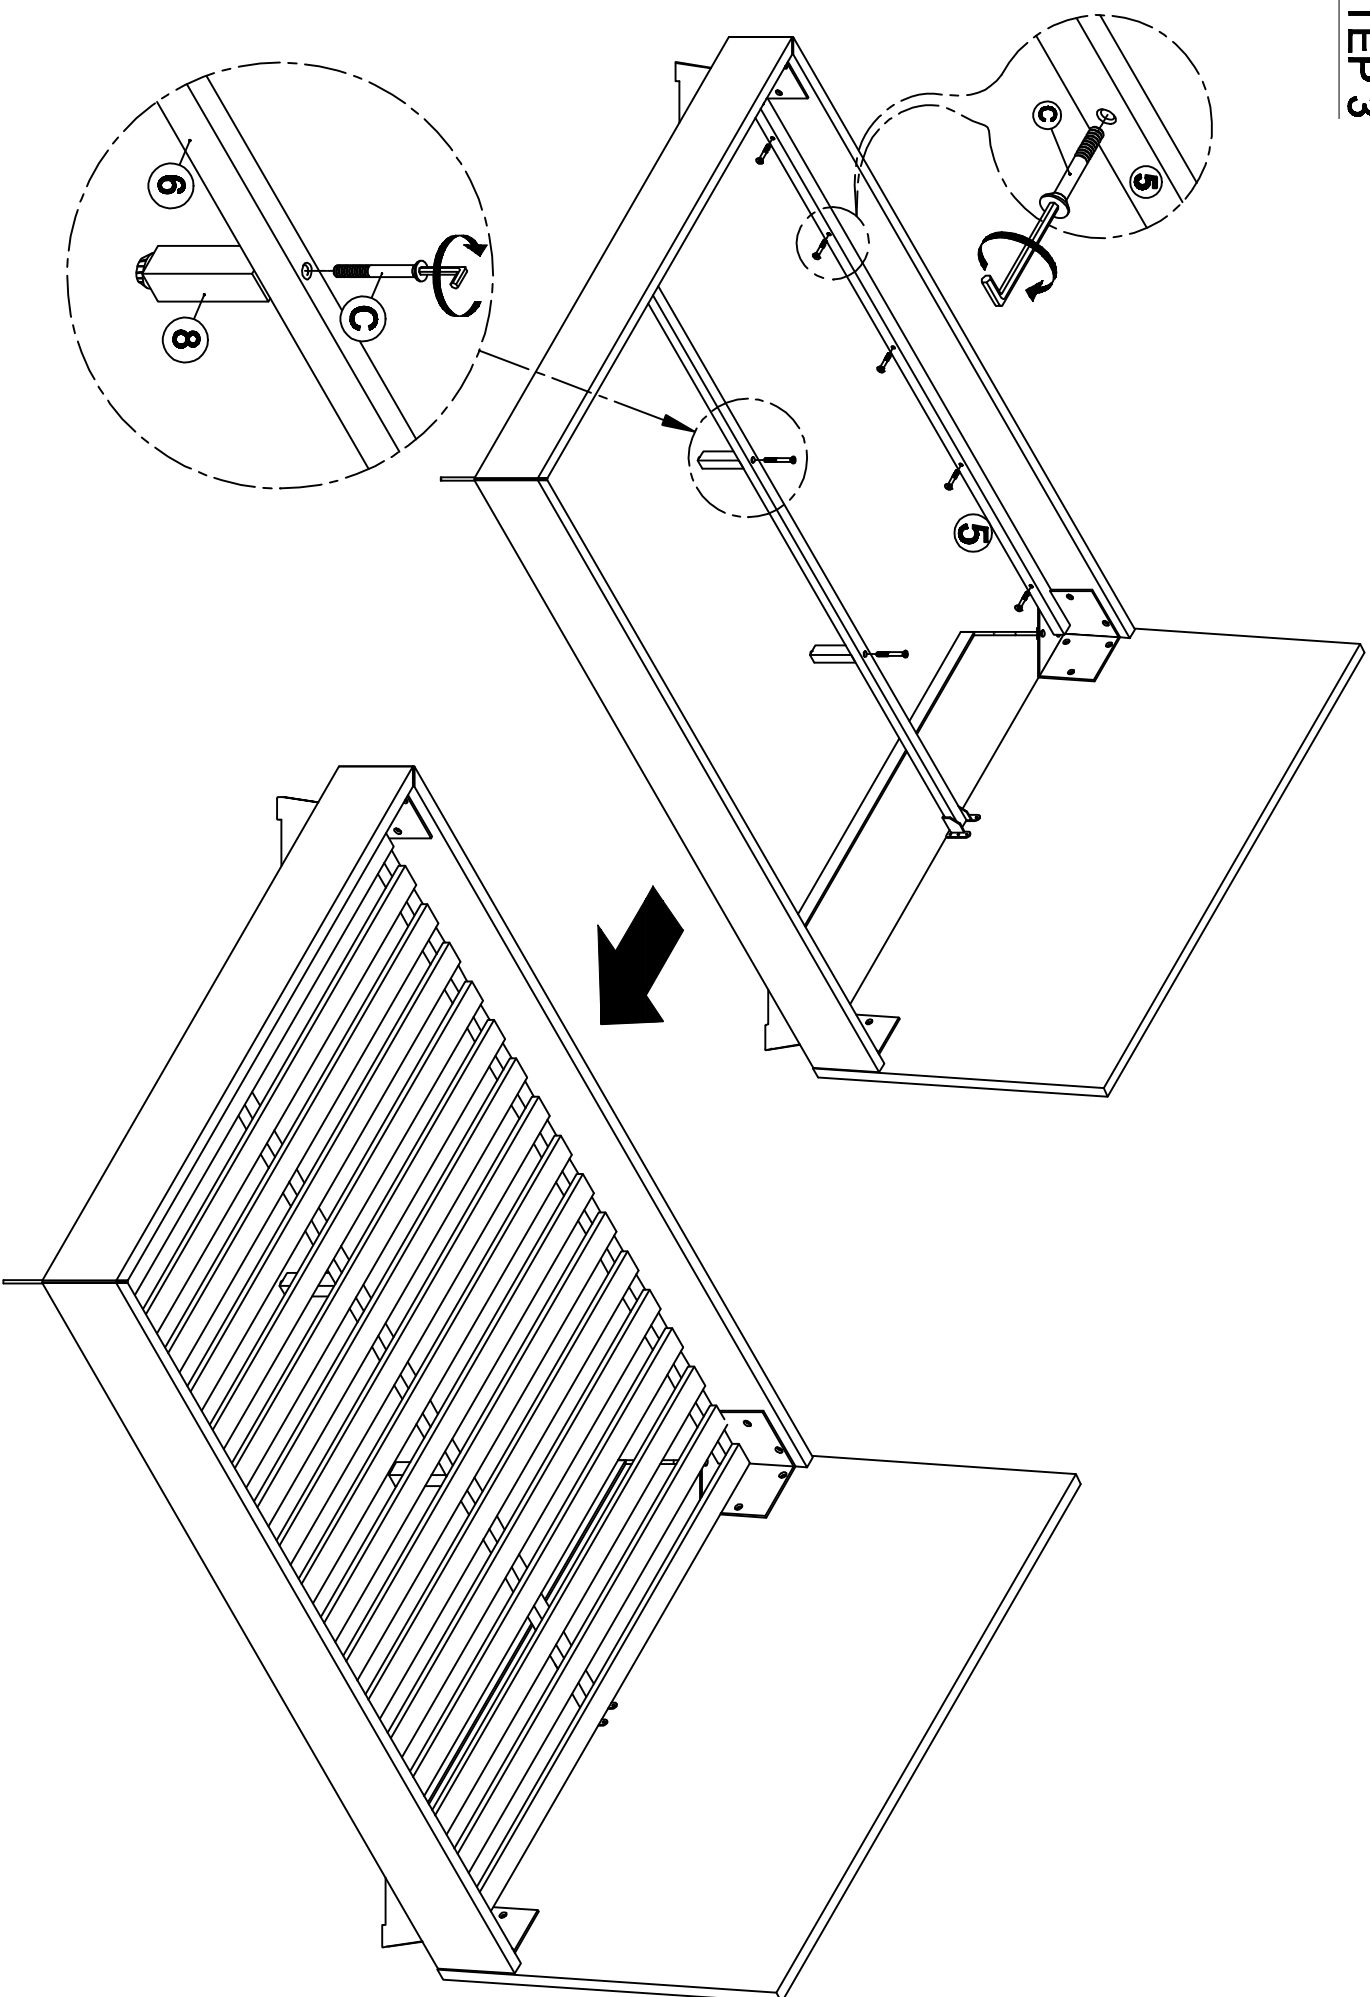


# **ASSEMBLY INSTRUCTION** **BROOME - KING BED**

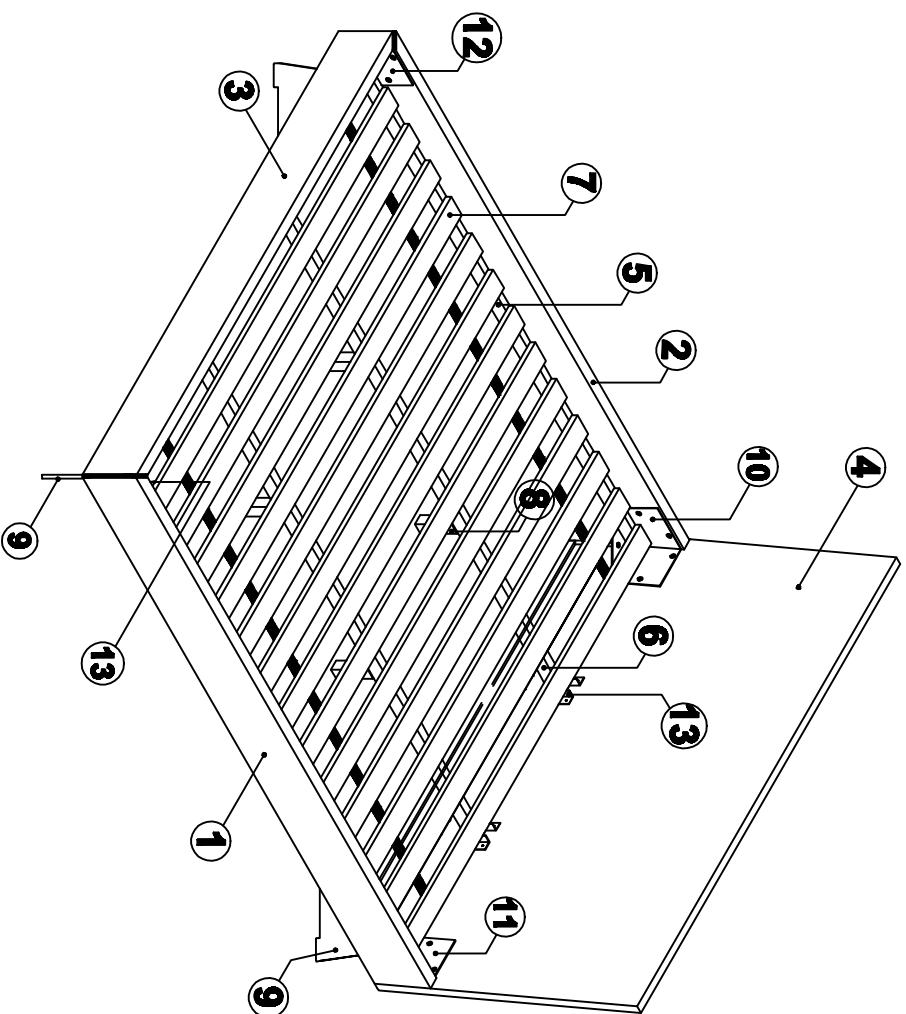







## **PARTS**

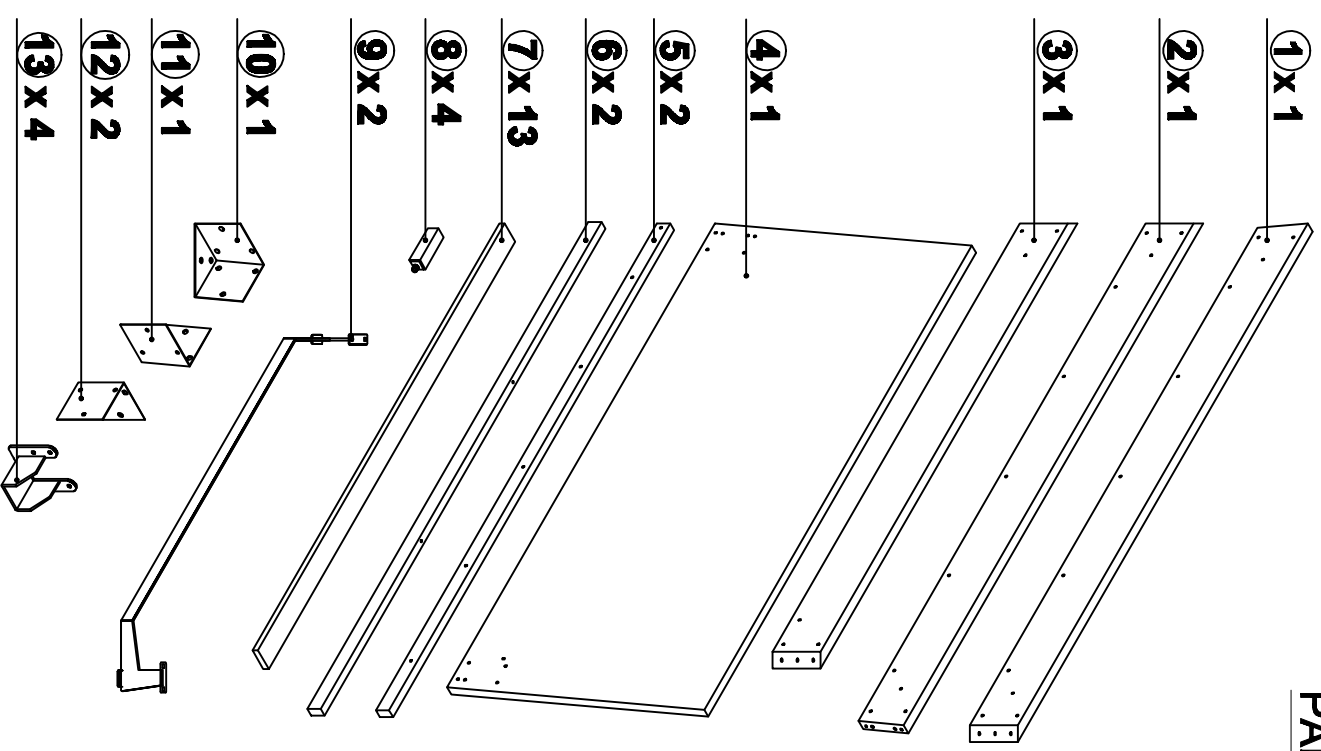


STEP 1

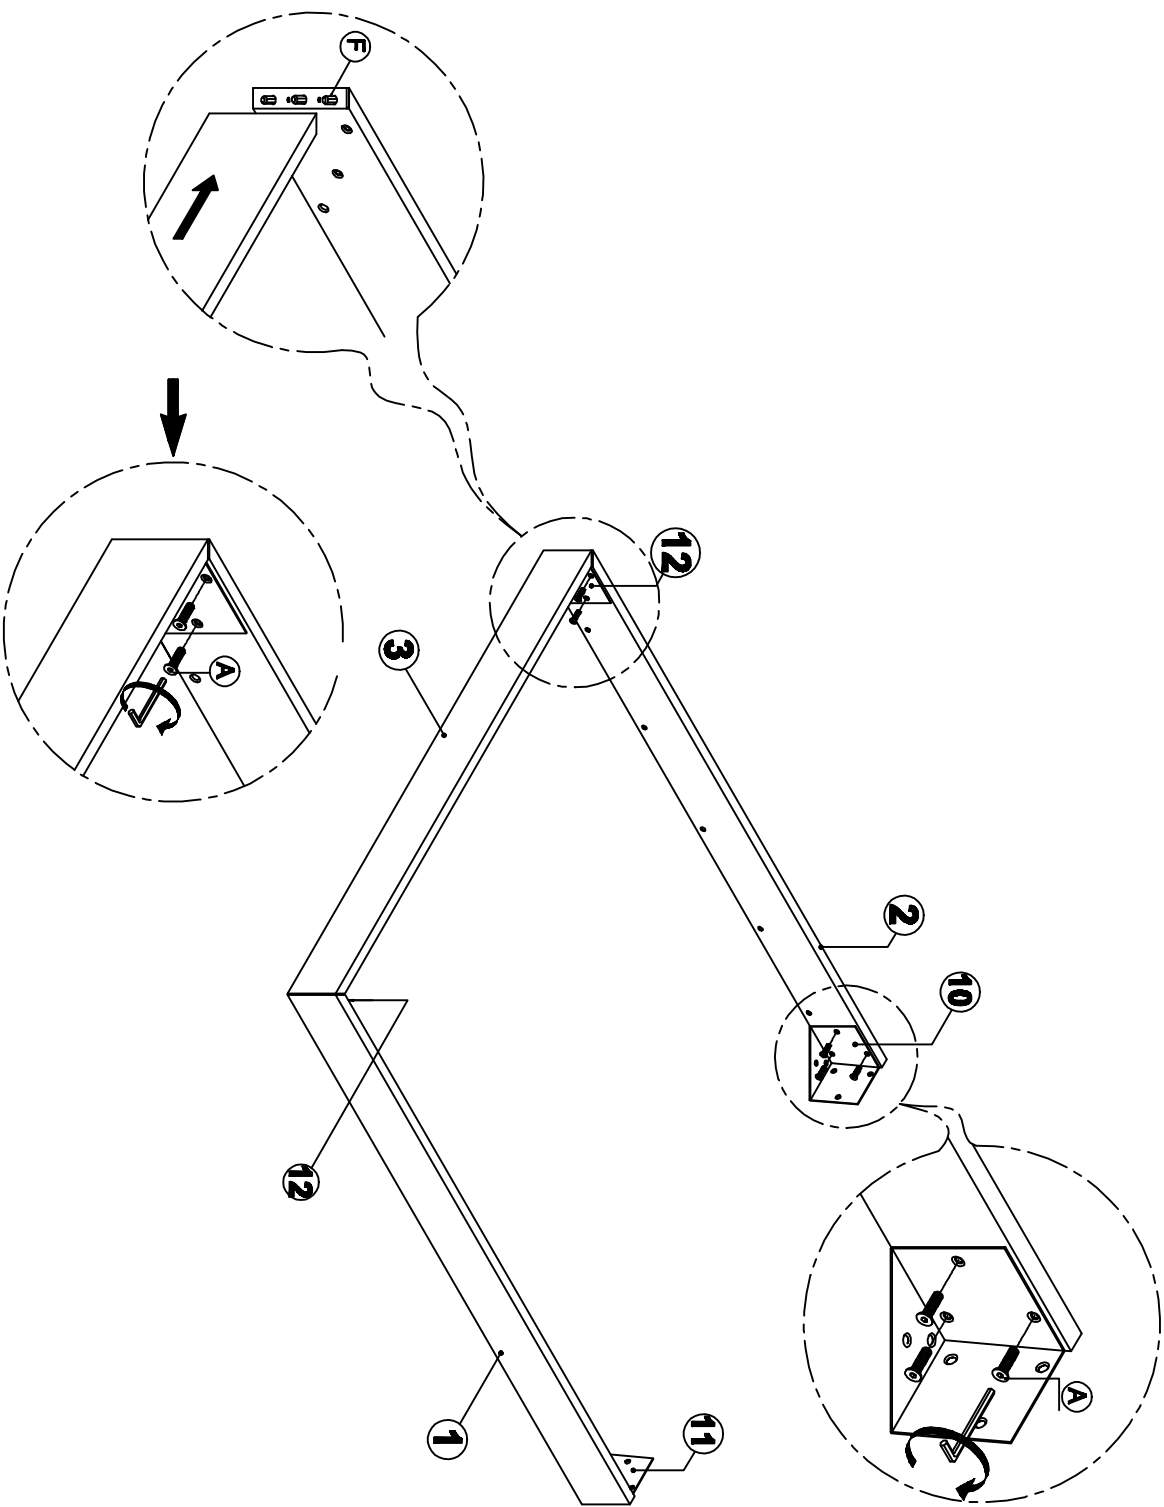


HARDWARE

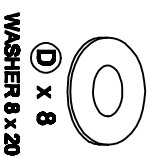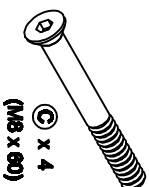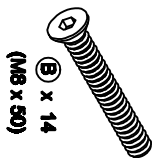


TOOL

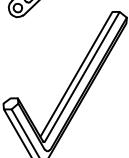

# STEP 3

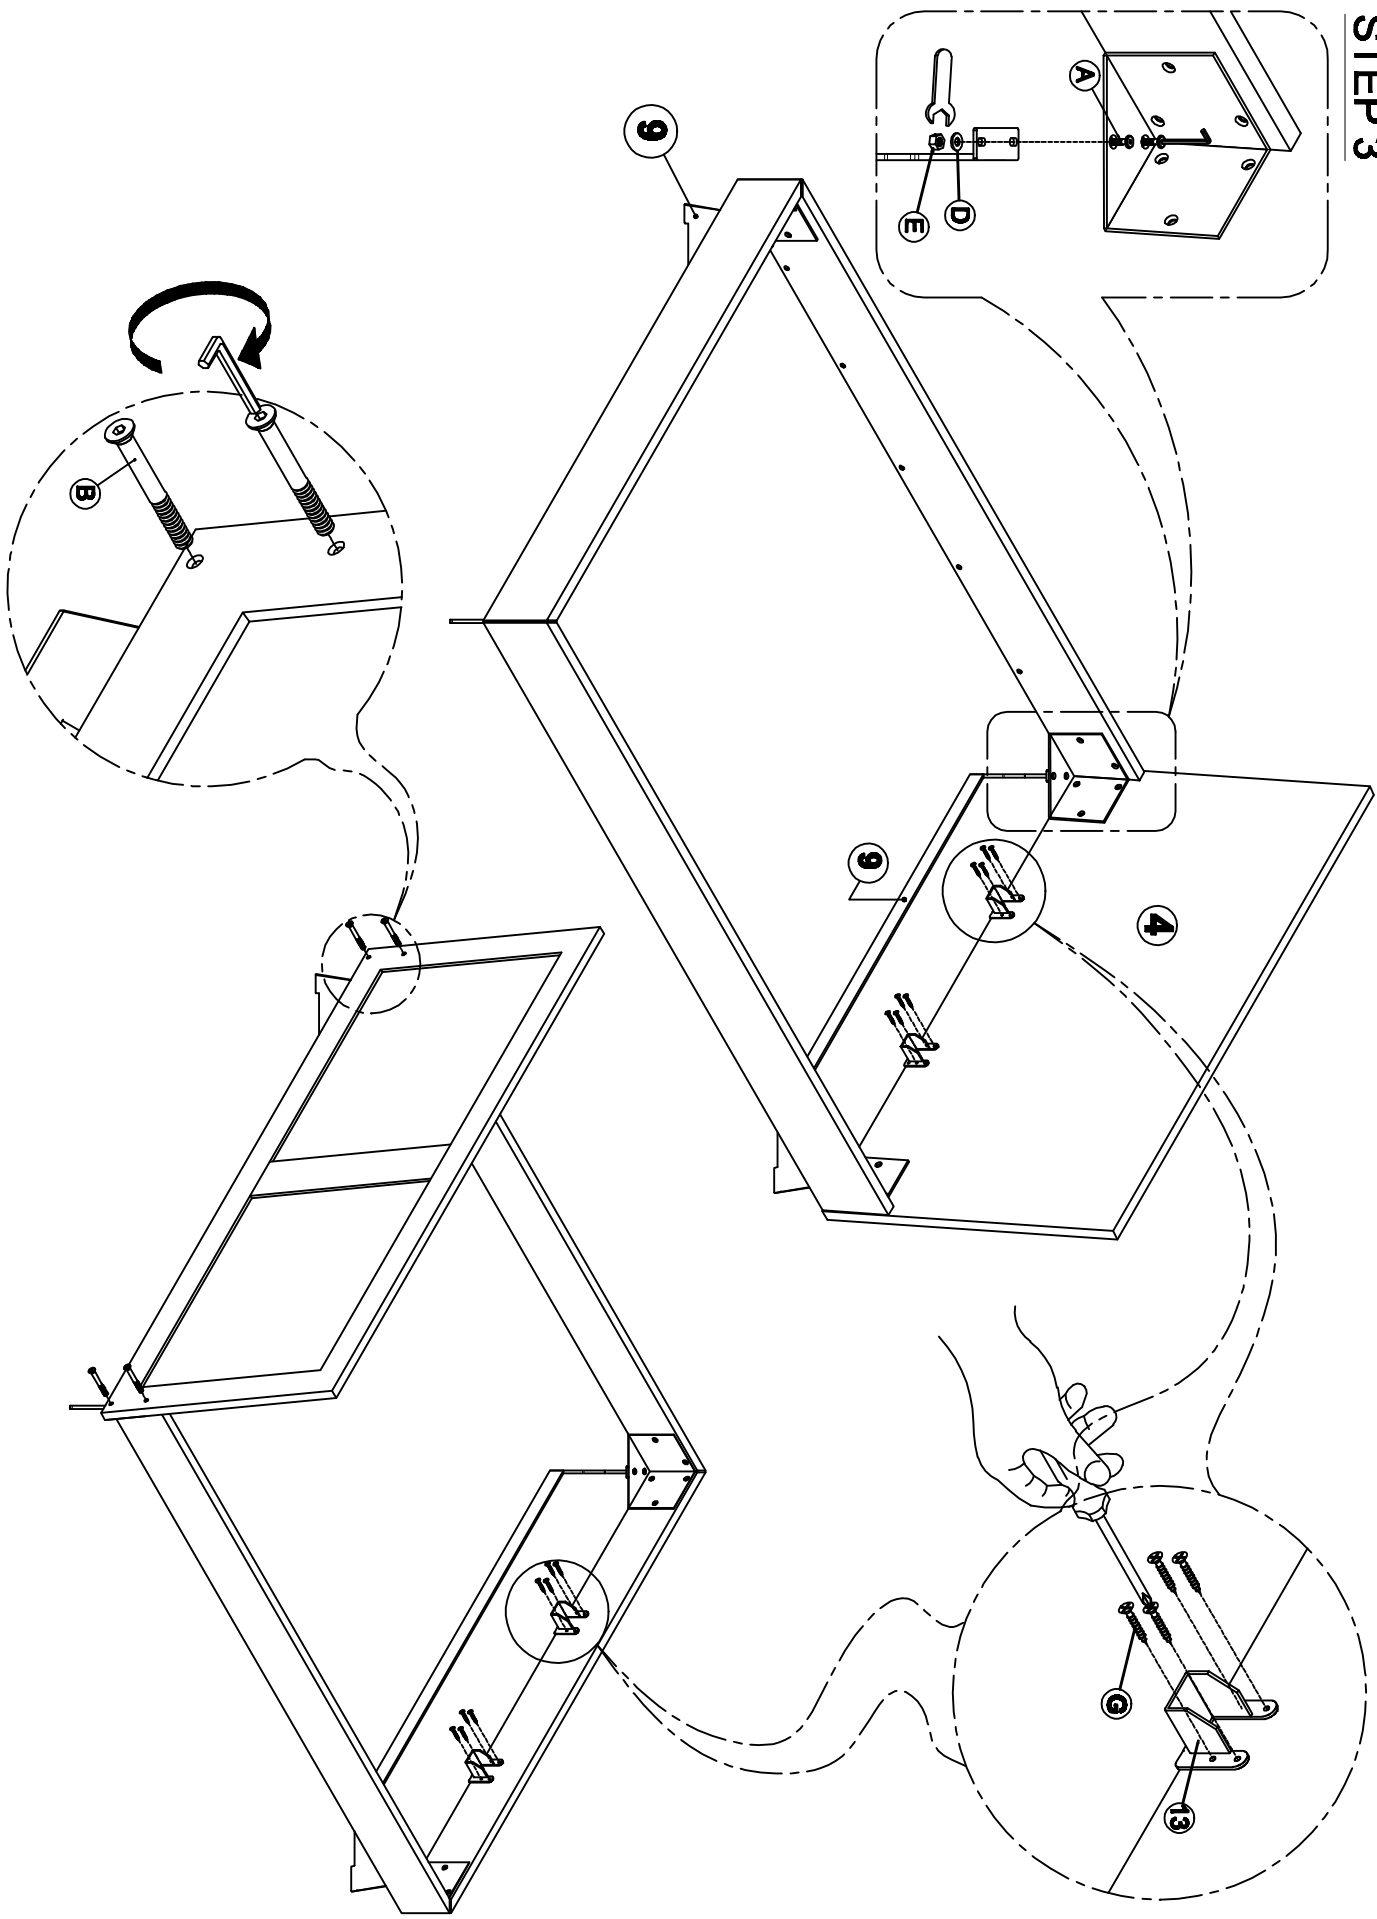


## STEP 4

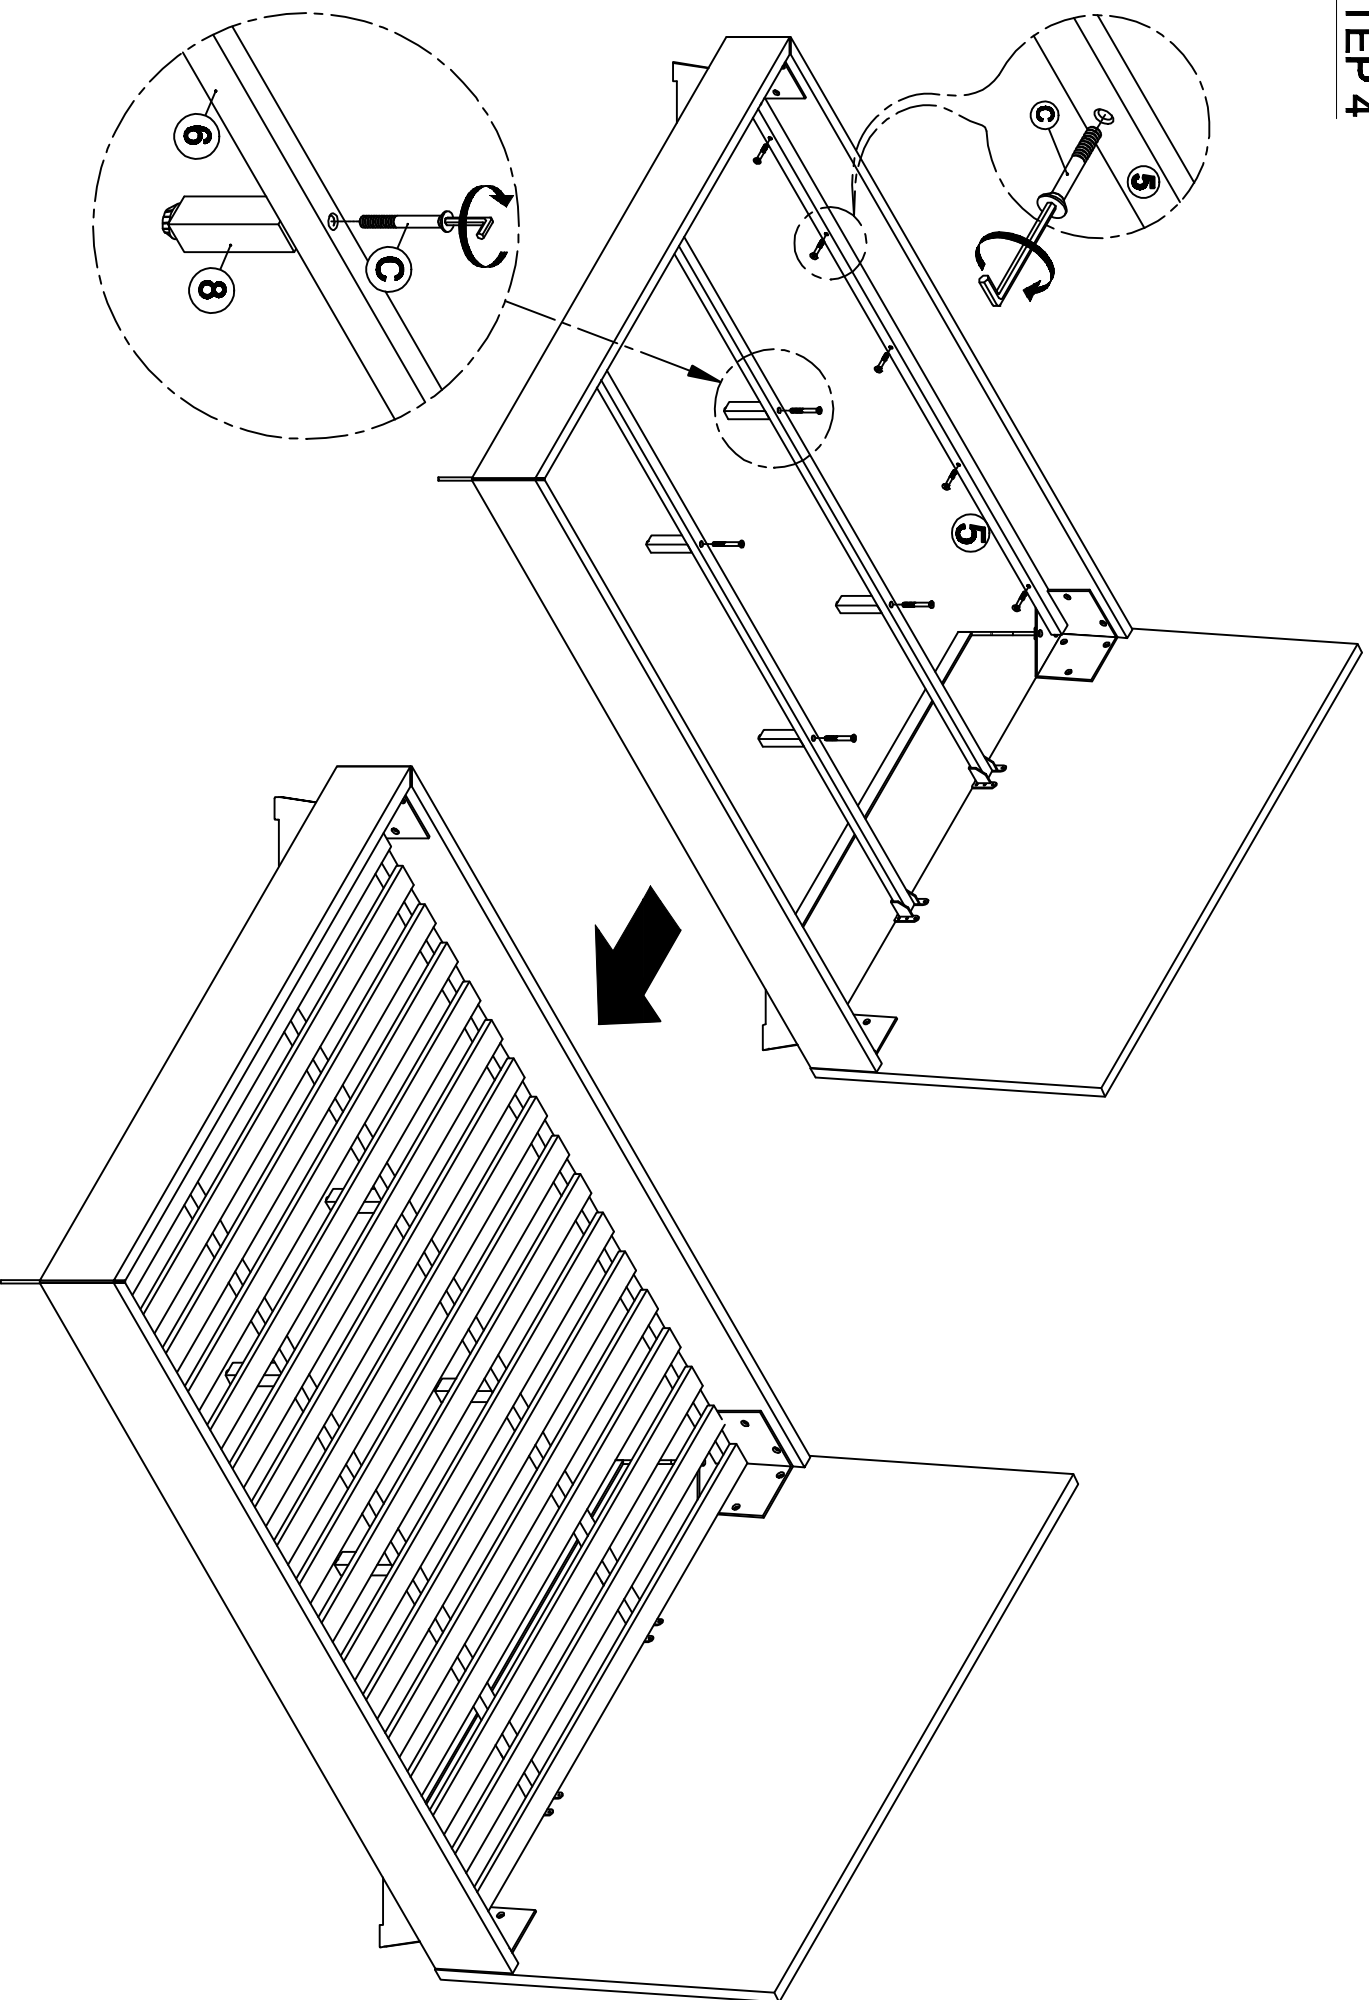




# ASSEMBLY INSTRUCTION


## BROOME - CALIFORNIA KING BED

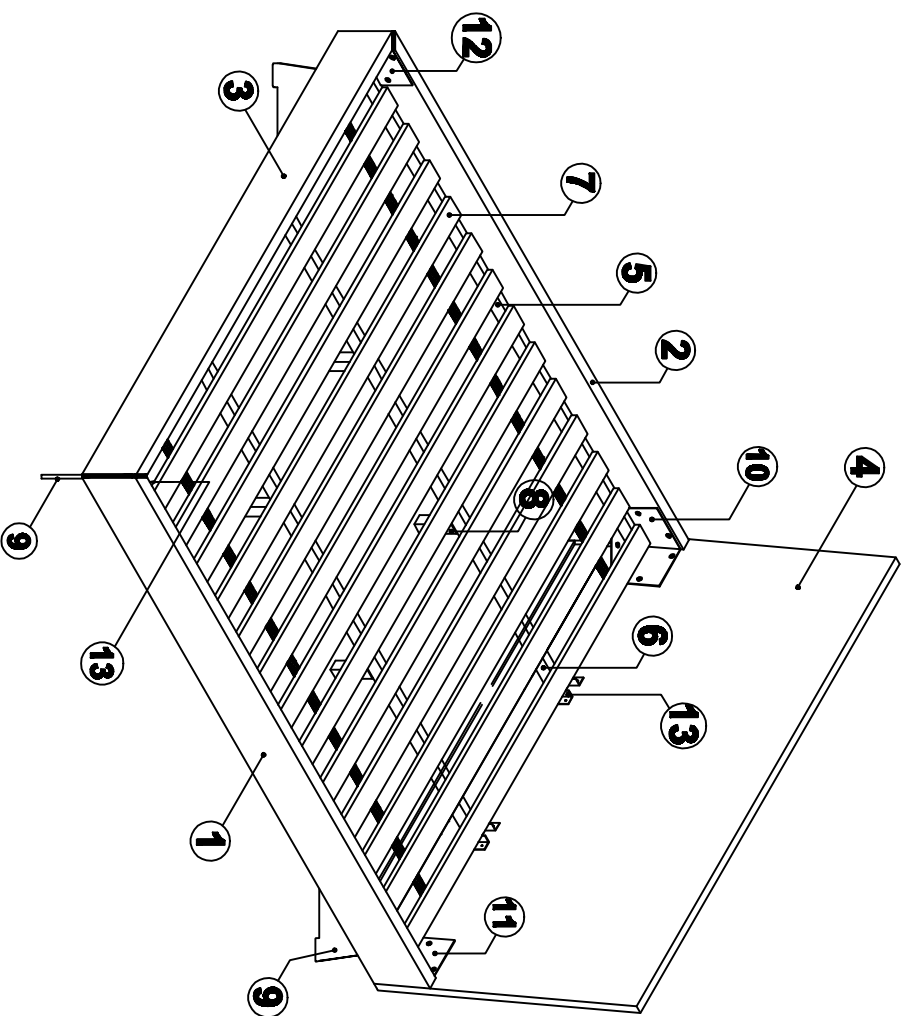







## PARTS

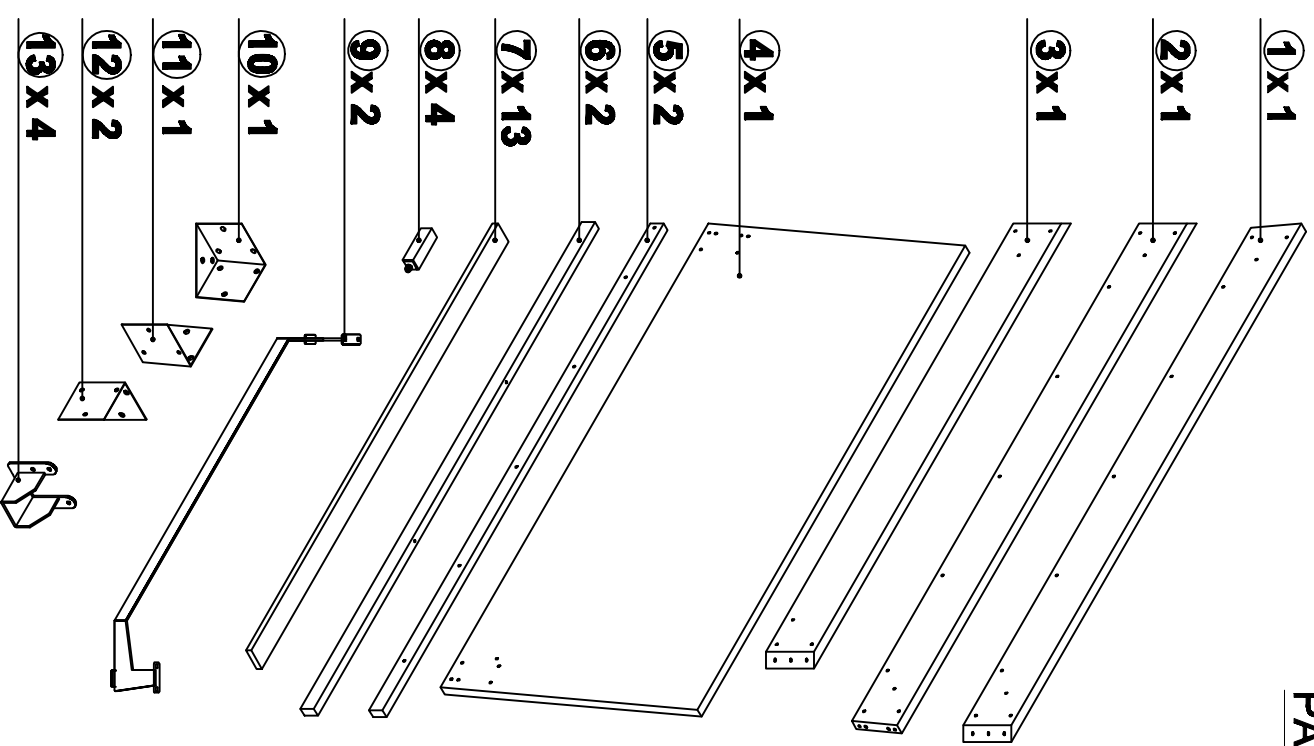


**STEP 1**

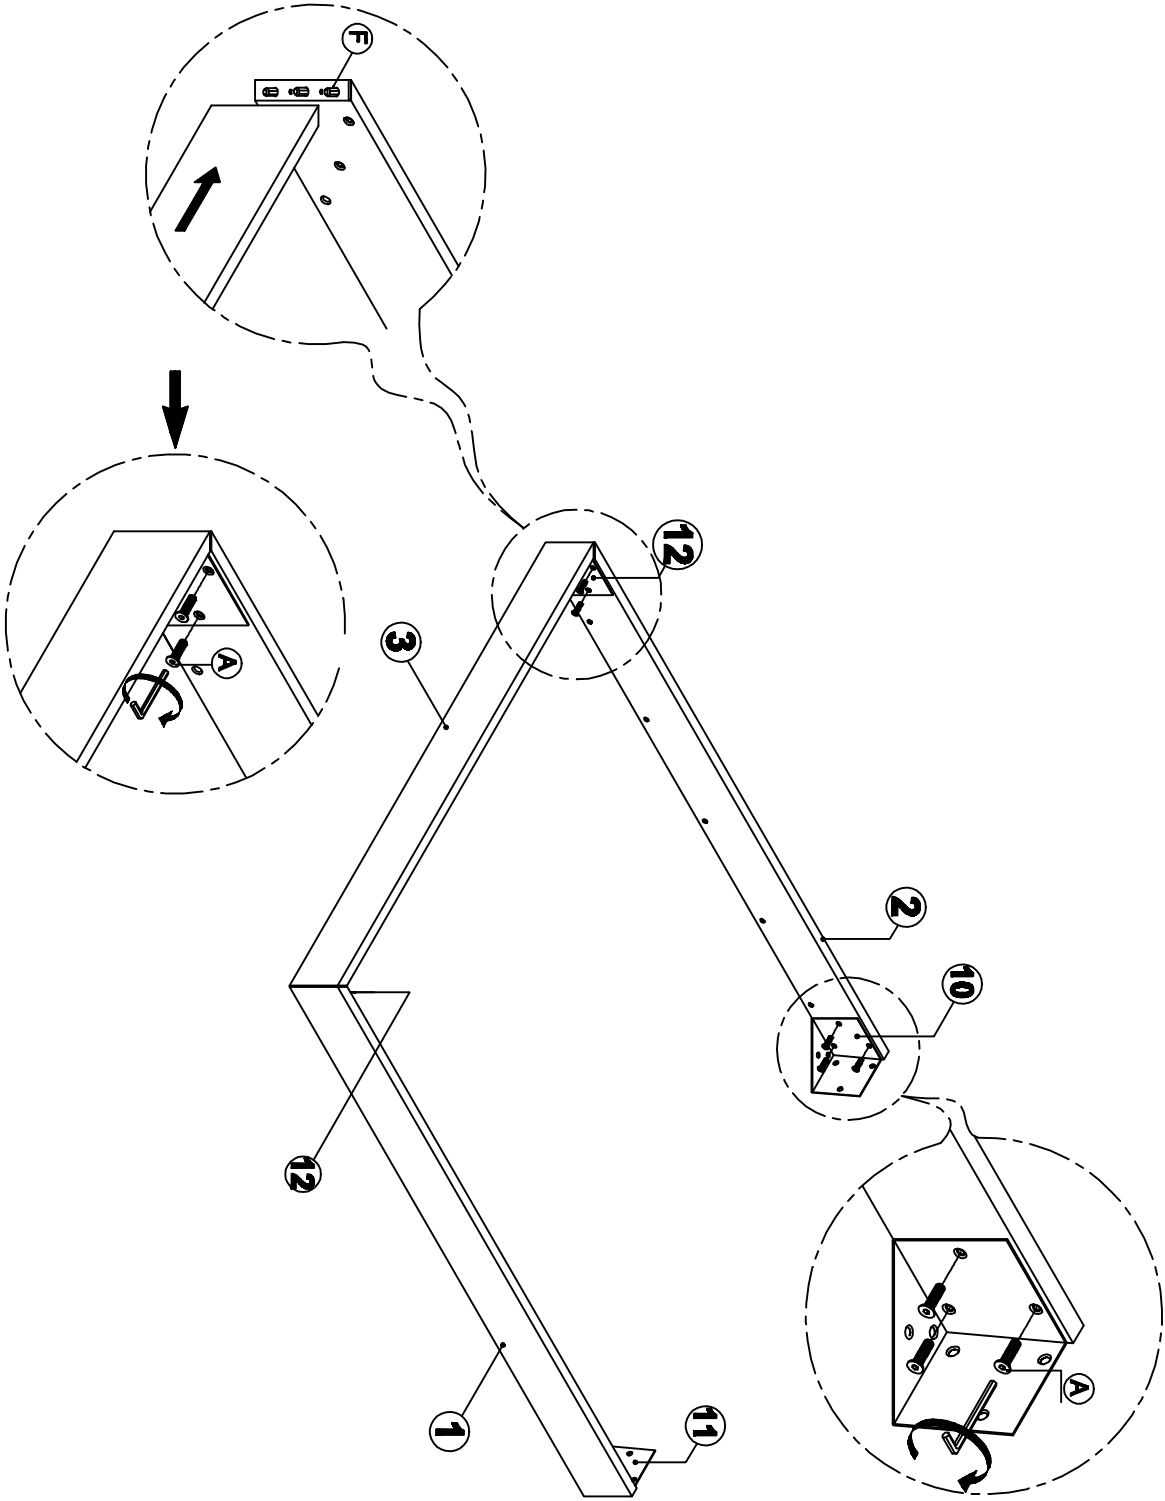


**HARDWARE**

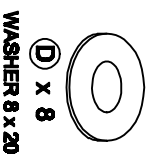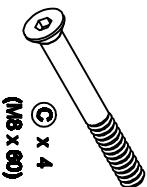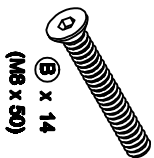

**TOOL**

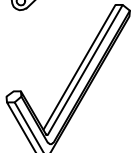

# STEP 3

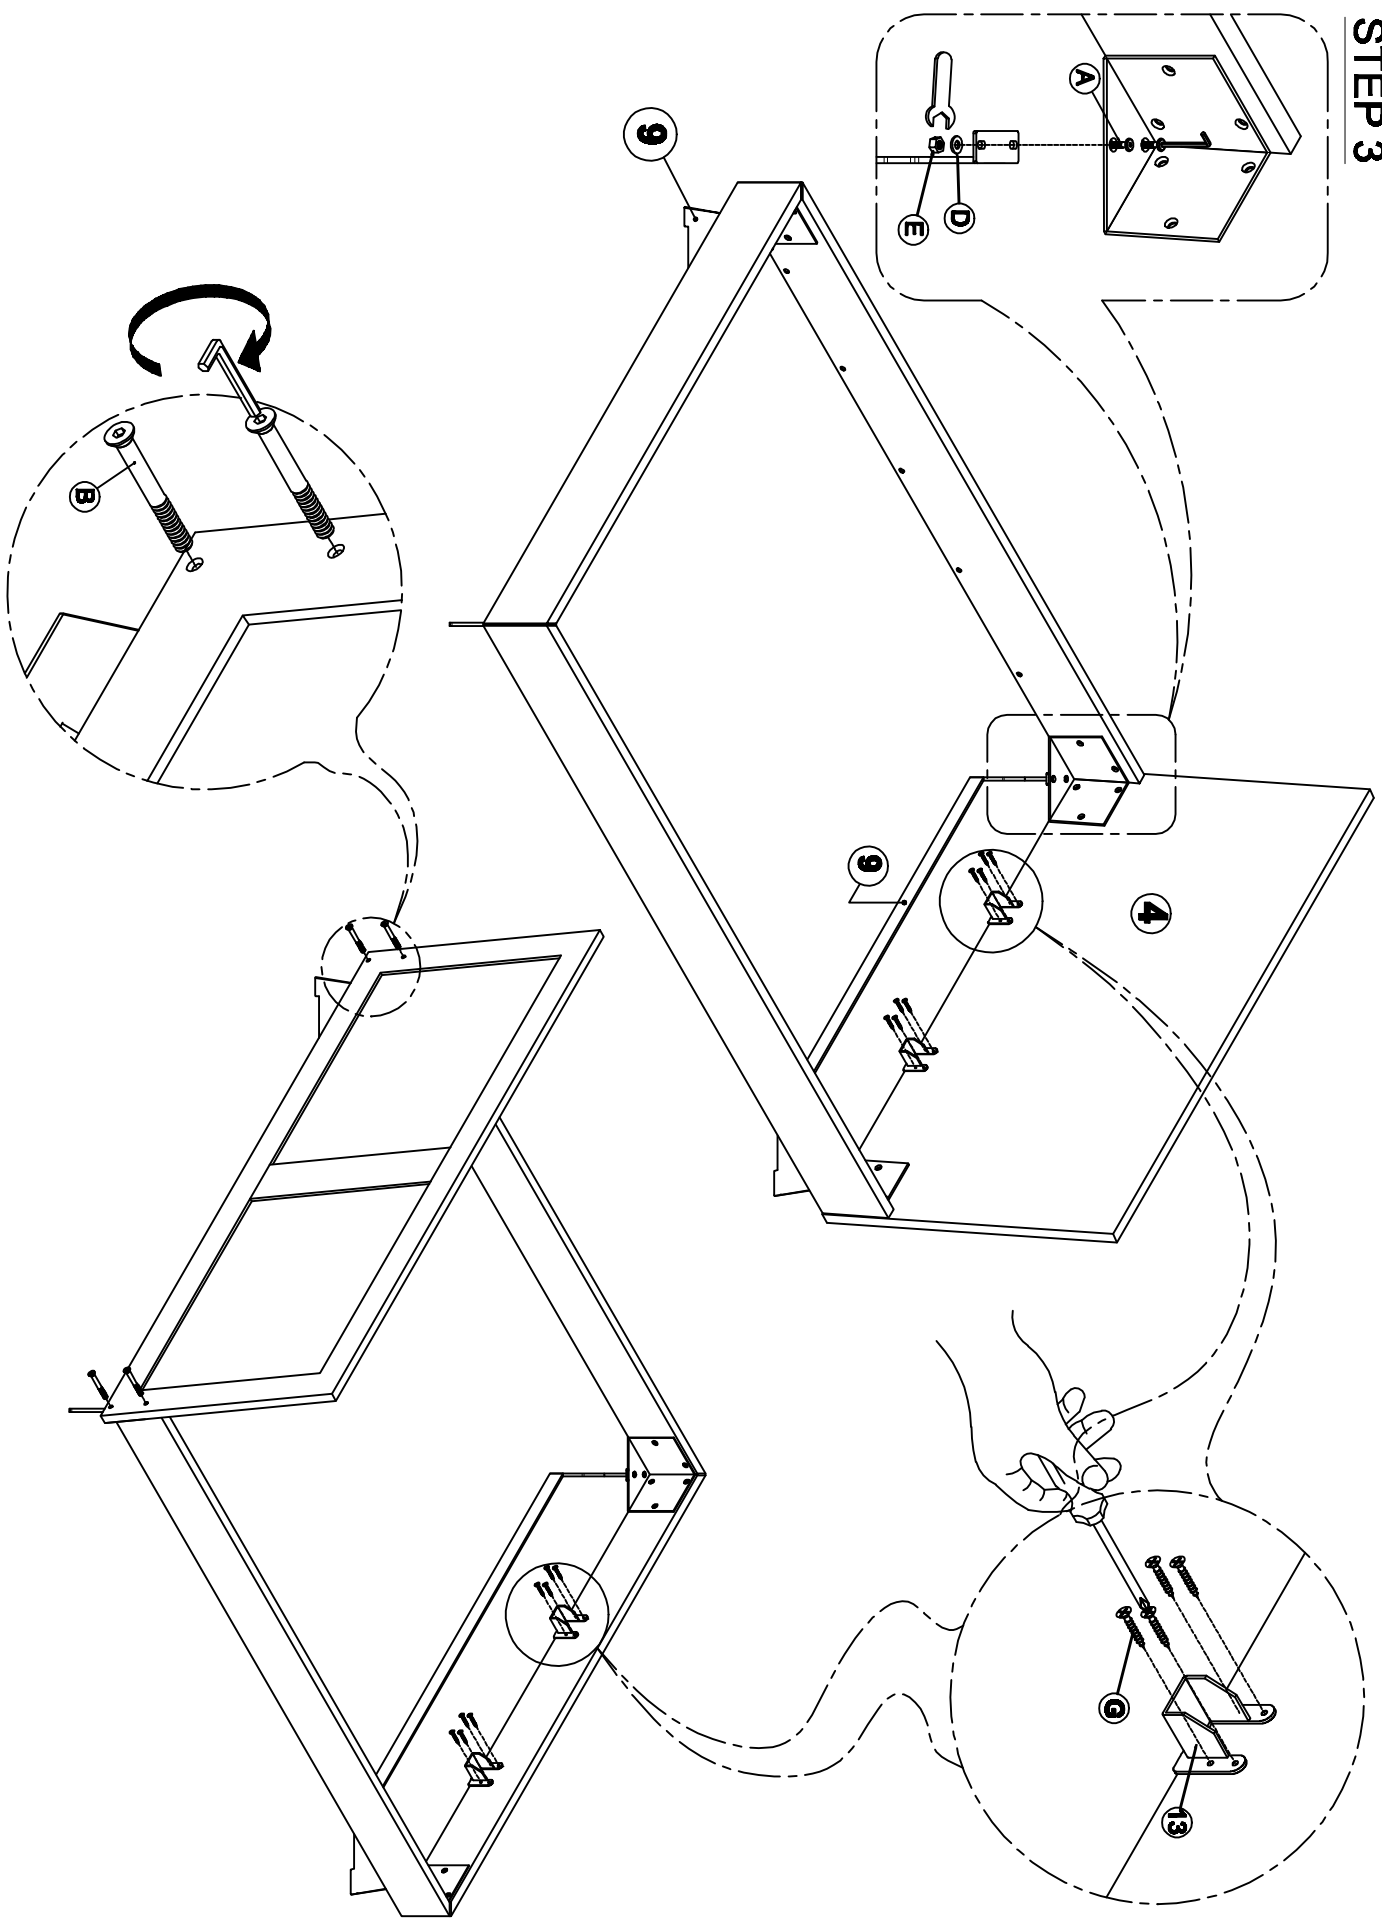

## STEP 4

