







VANDERBILT

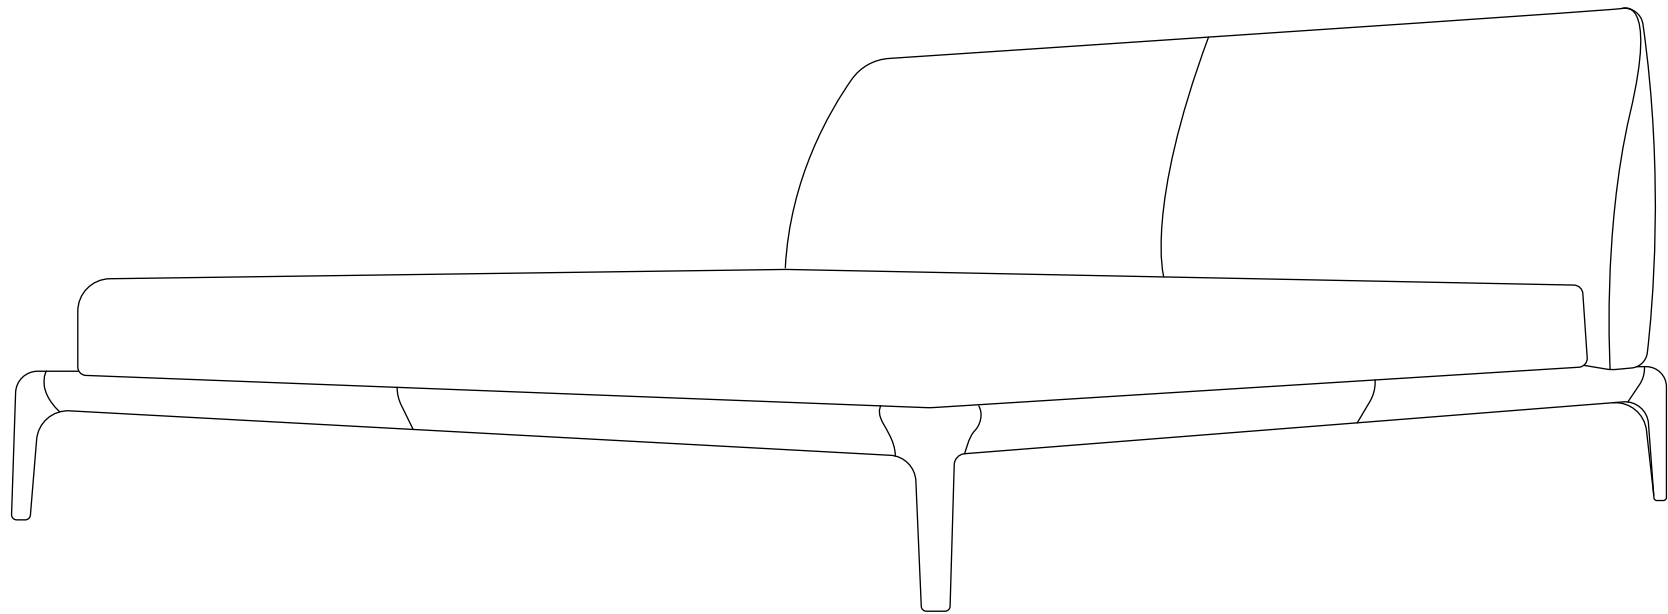

MODLOFT



ASSEMBLY INSTRUCTION VANDERBILT 5803-CK

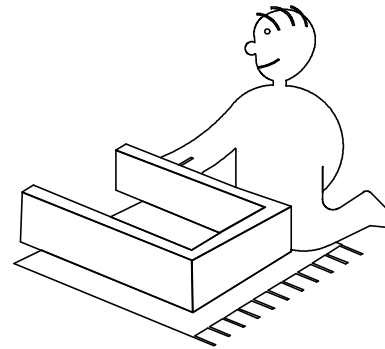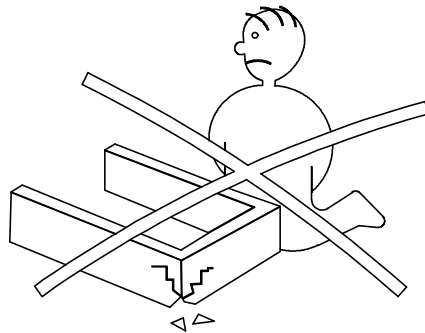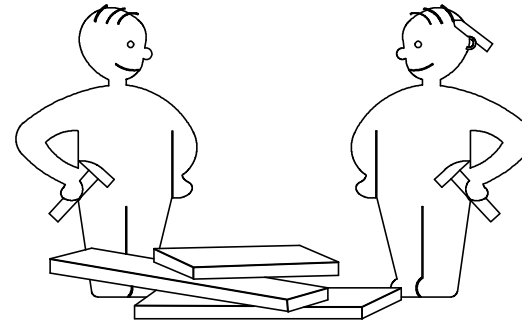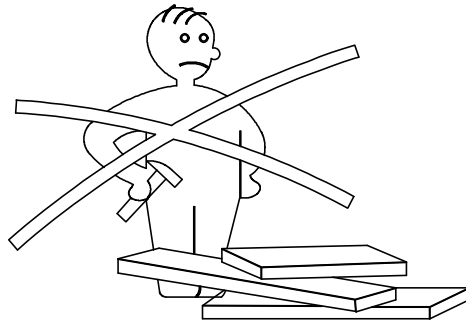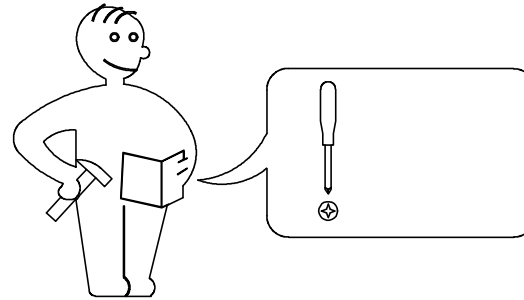





ASSEMBLY INSTRUCTION VANDERBILT 5803-CK

PARTS


① x 1

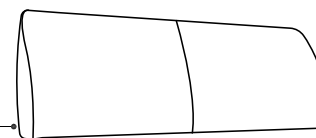


② x 2 (Left - Right)

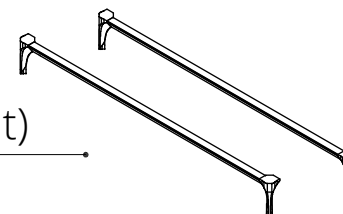



③ x 1

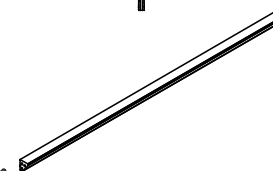

④ x 1

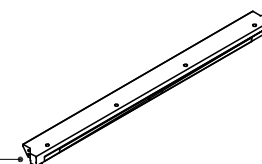

⑤ x 1

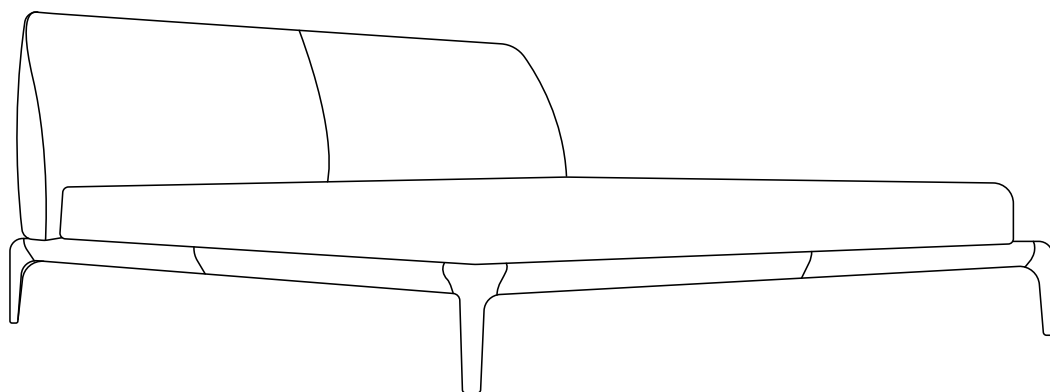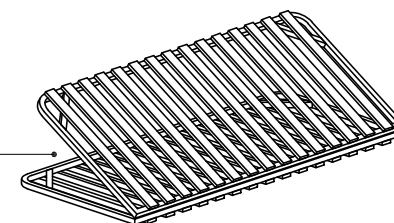

HARDWARE




M8x30mm

Ⓐ x 24




9x22mm

Ⓑ x 26




250x90x38mm

Ⓒ x 4




Ⓓ x 10



M8mm

Ⓔ x 4



125x65x35mm

Ⓕ x 4




M8x100mm

Ⓖ x 6



Ⓗ x 8

TOOL



Ⓘ x 1




Ⓙ x 1



ASSEMBLY INSTRUCTION VANDERBILT 5803-CK


STEP 1

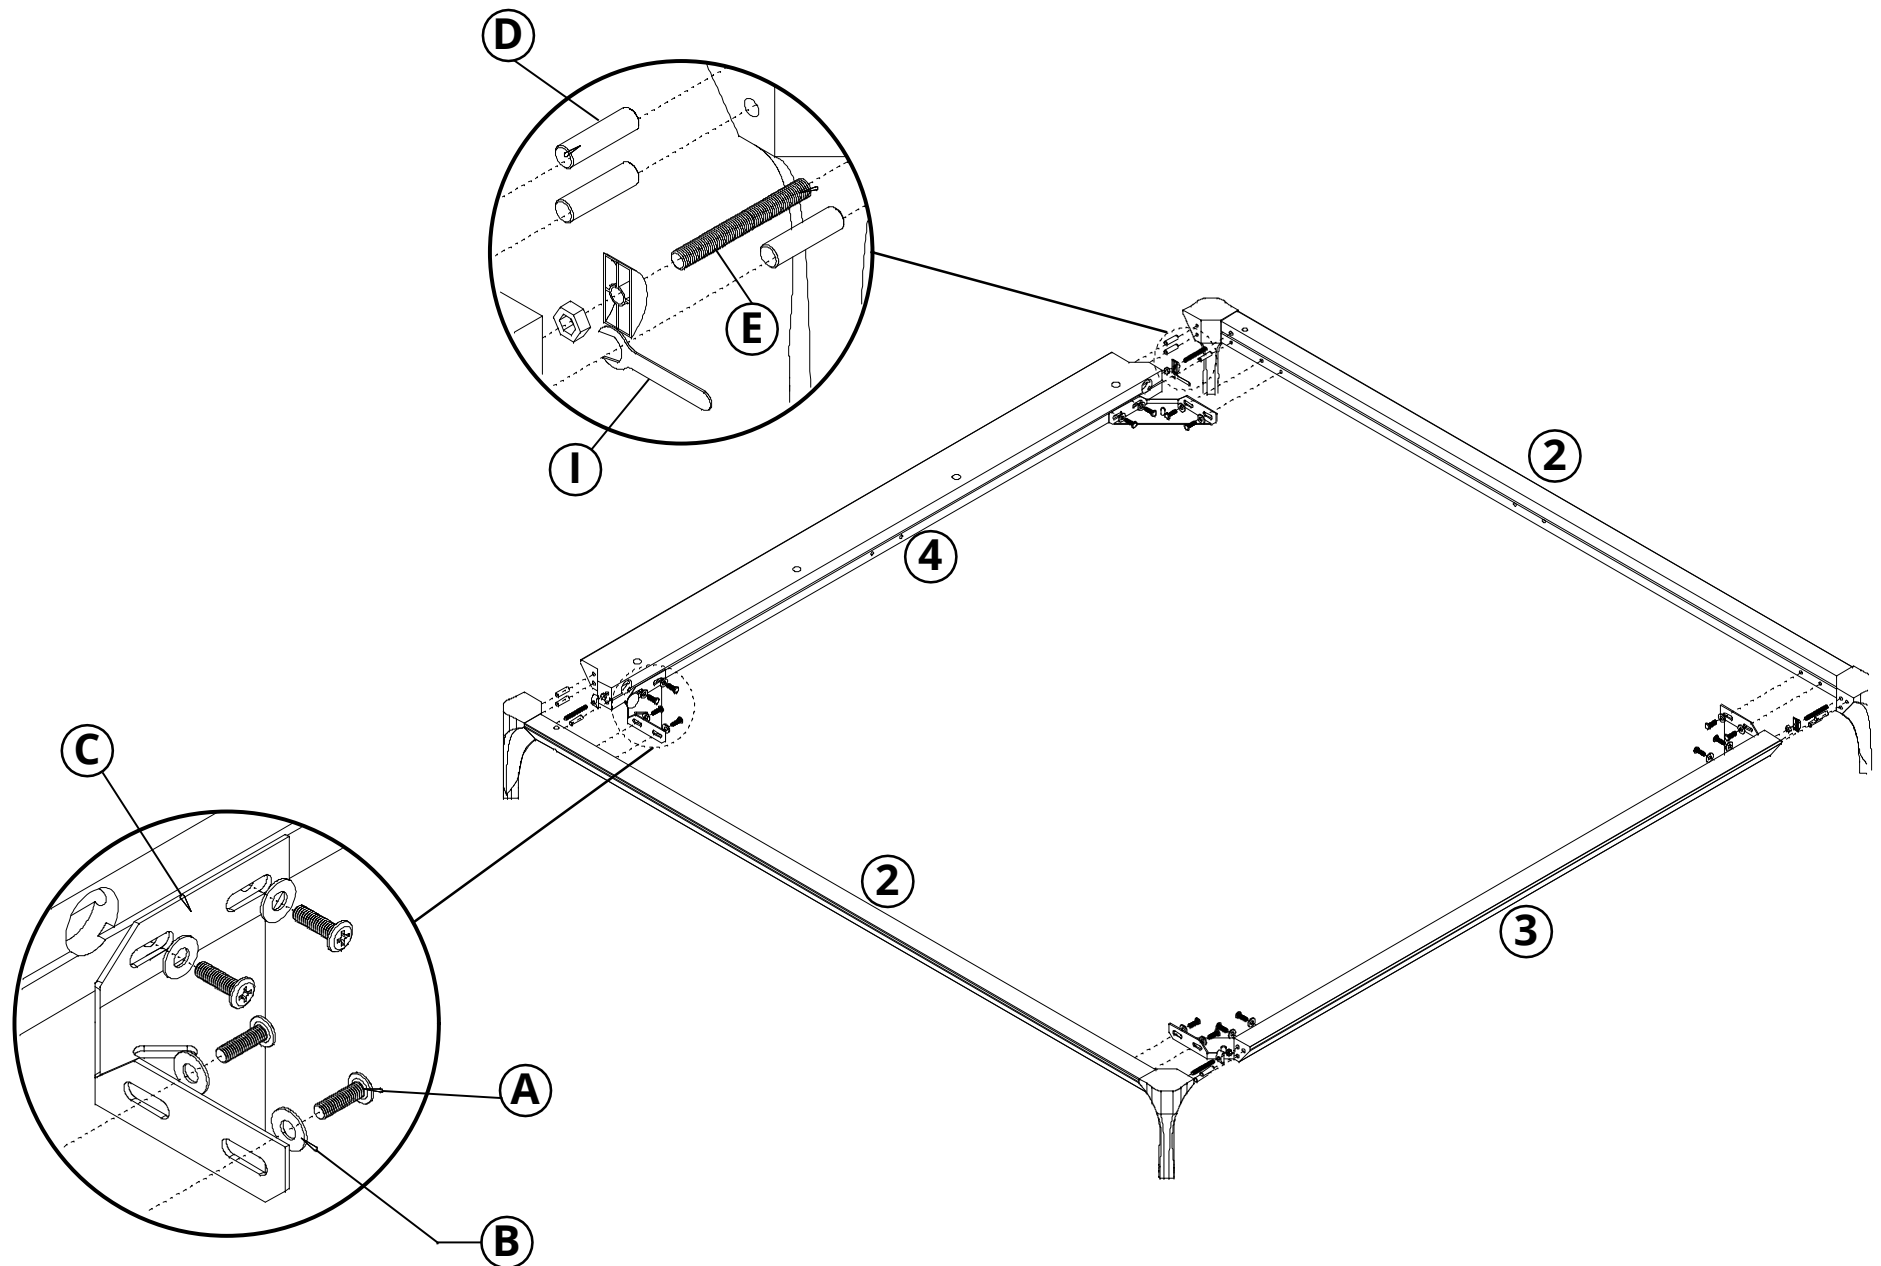



ASSEMBLY INSTRUCTION VANDERBILT 5803-CK


STEP 2

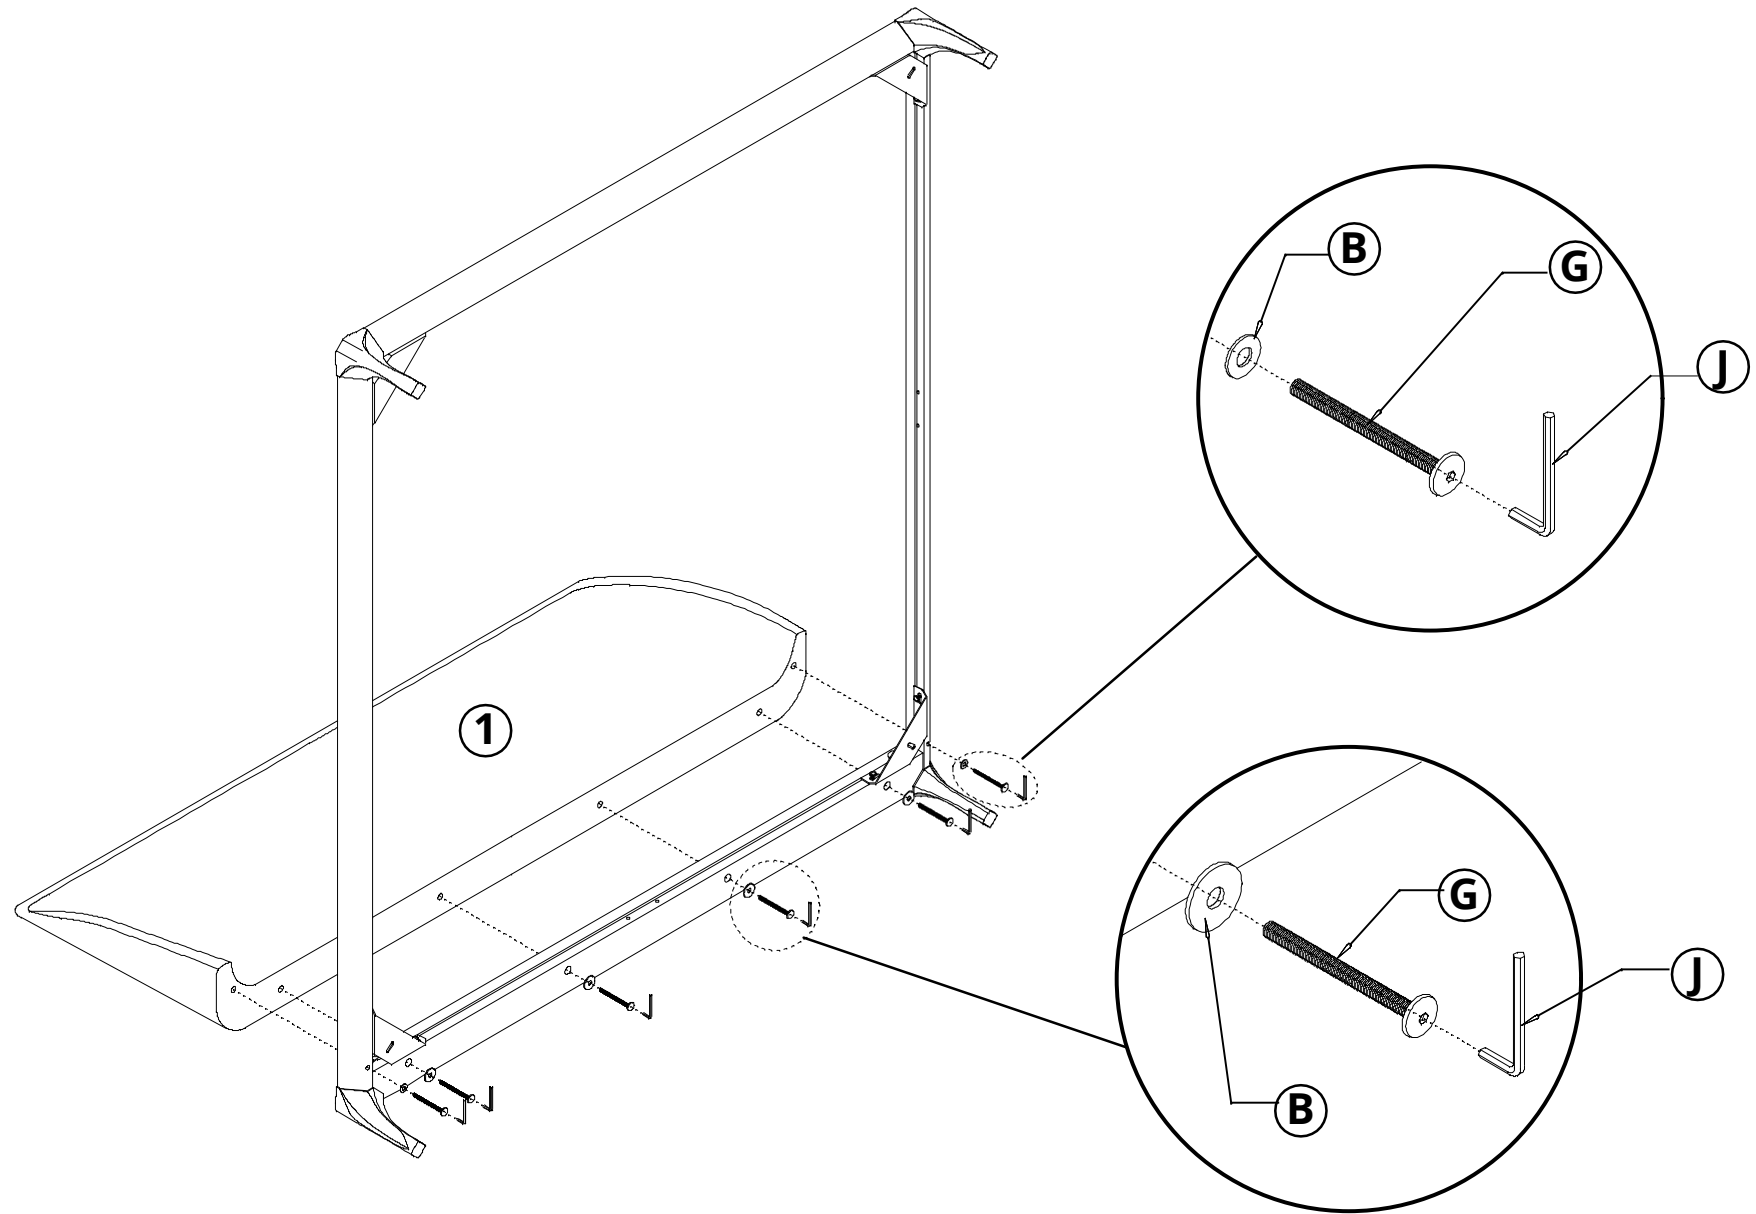




ASSEMBLY INSTRUCTION VANDERBILT 5803-CK

STEP 3

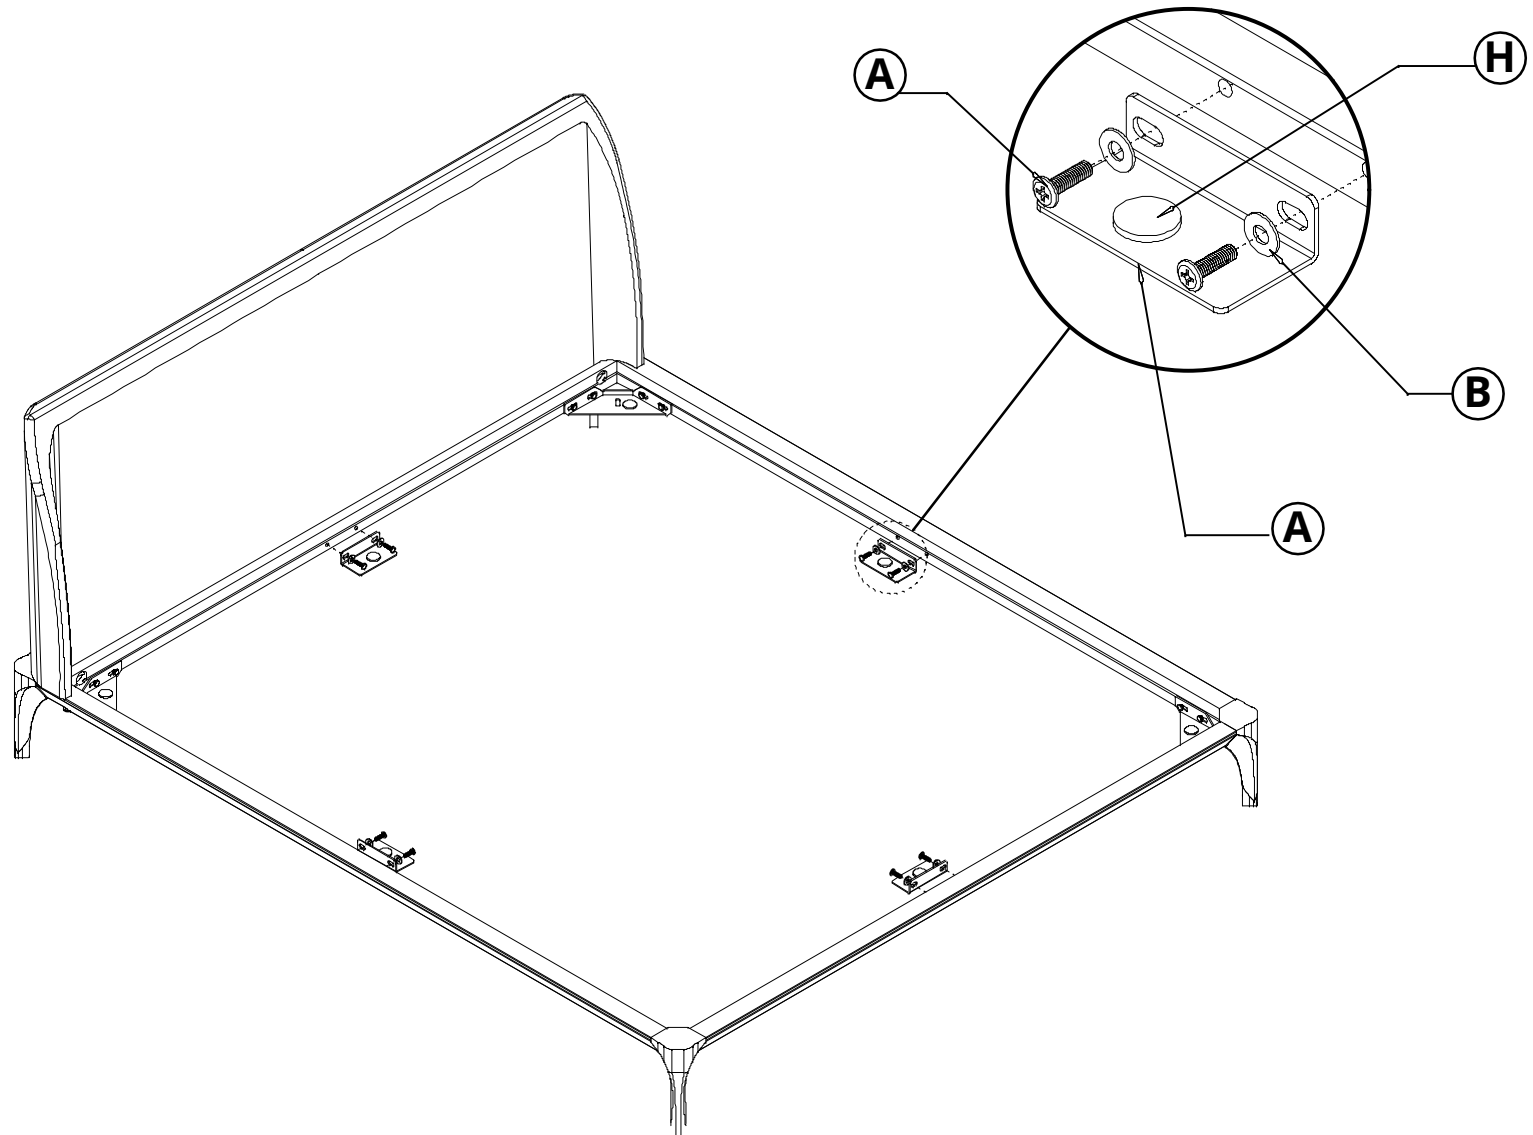



ASSEMBLY INSTRUCTION VANDERBILT 5803-CK

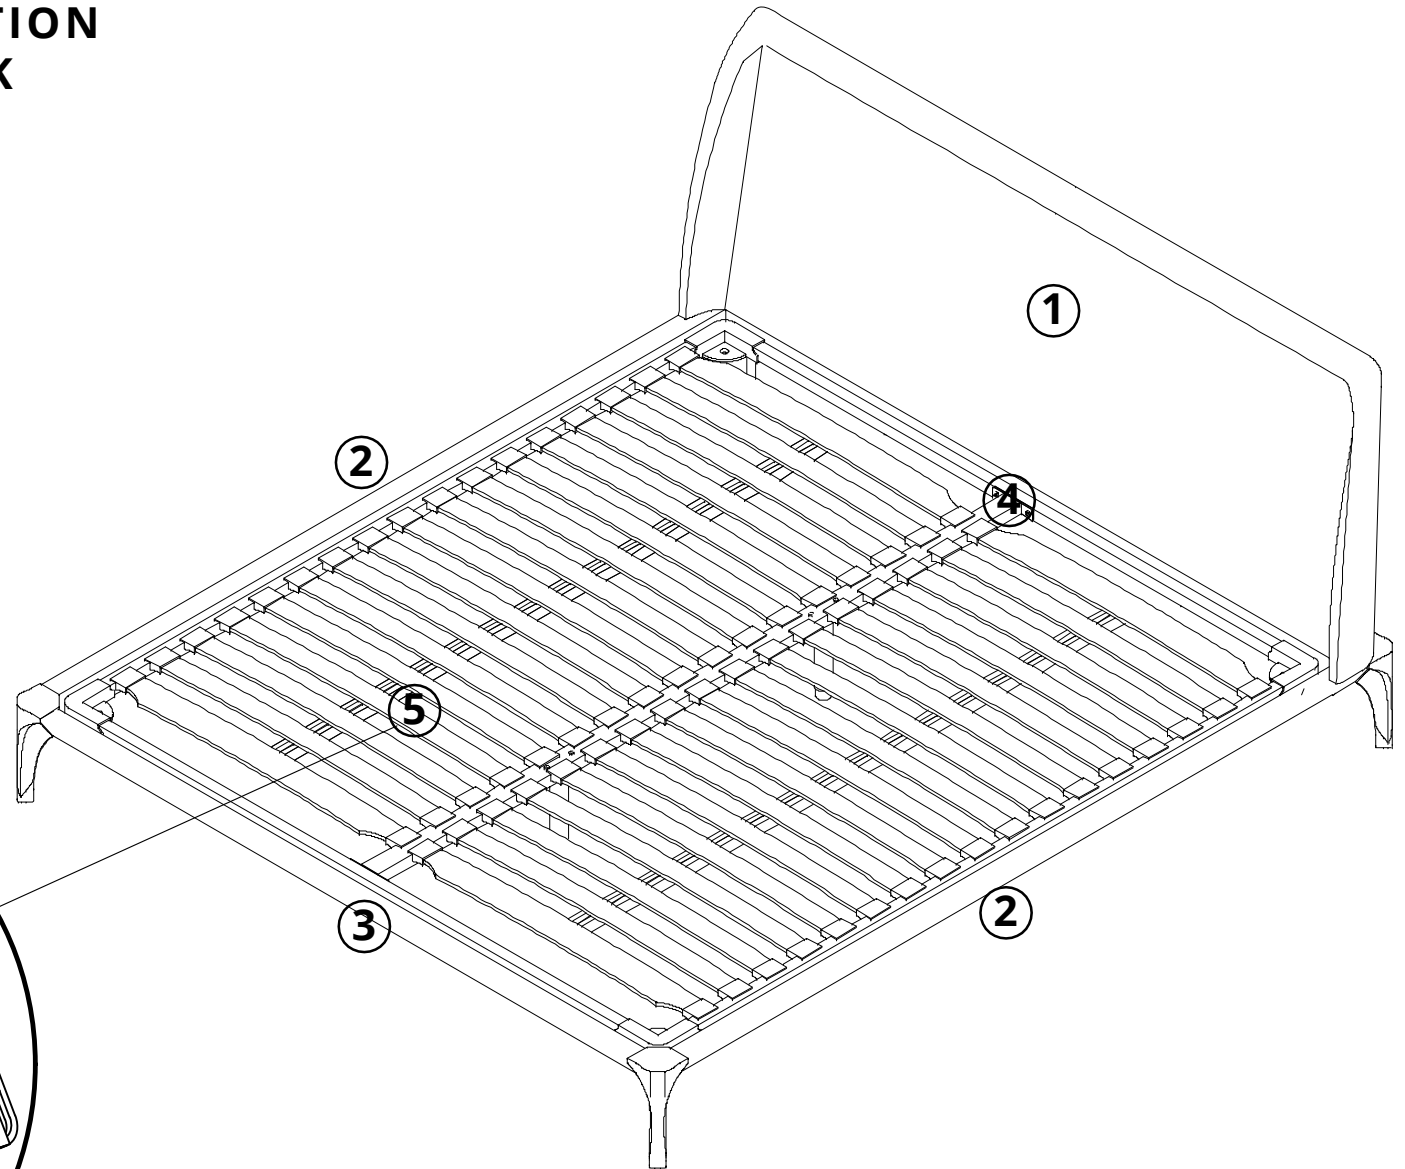

STEP 4

