




PERRY

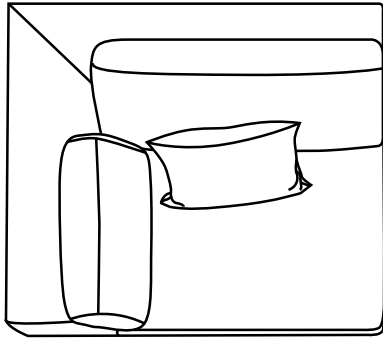


Arm Chair Left

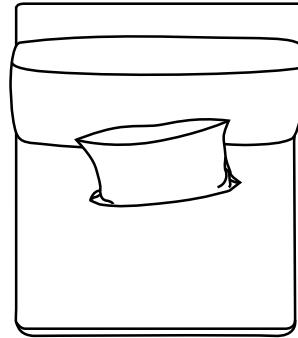


Armless Chair

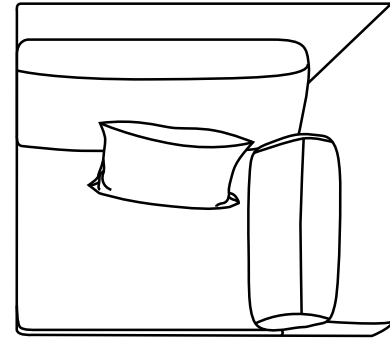

Arm Chair Right

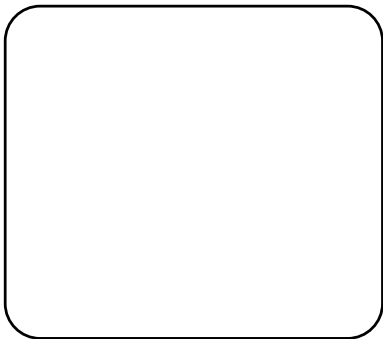

Ottoman

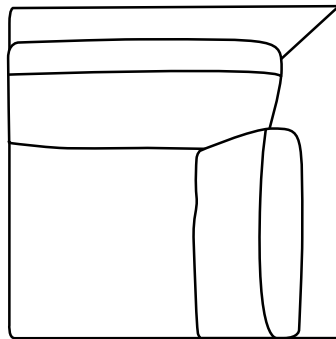

Corner Chair

MODLOFT





ASSEMBLY INSTRUCTION

PERRY COMPONENTS MD821

PARTS


① x 1

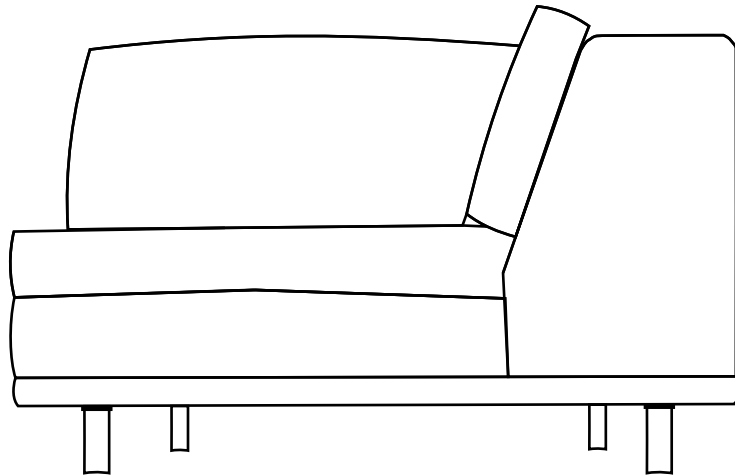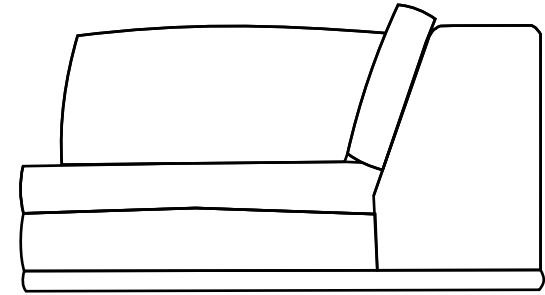

② x 4



③ x 2

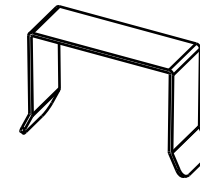




ASSEMBLY INSTRUCTION PERRY COMPONENTS MD821


CONNECT THE COMPONENTS

STEP 1

ARM CHAIR + ARM CHAIR

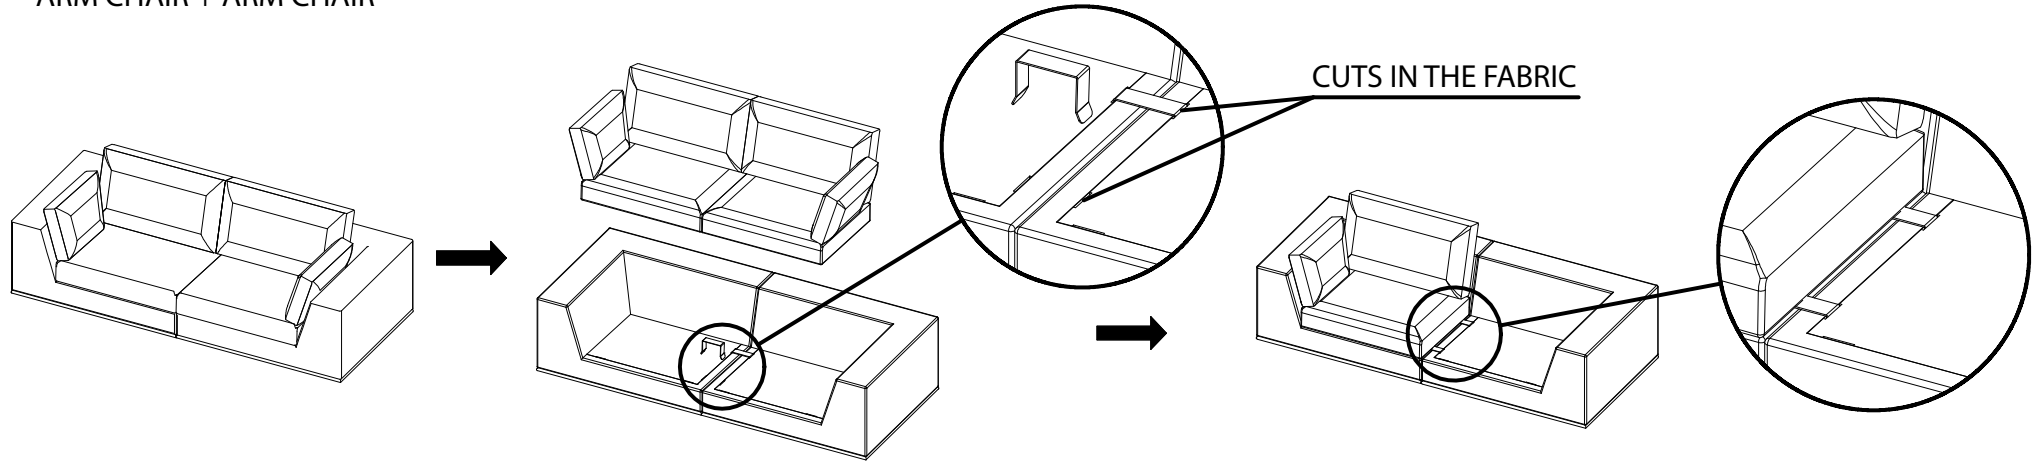


ARMLESS + ARM CHAIR

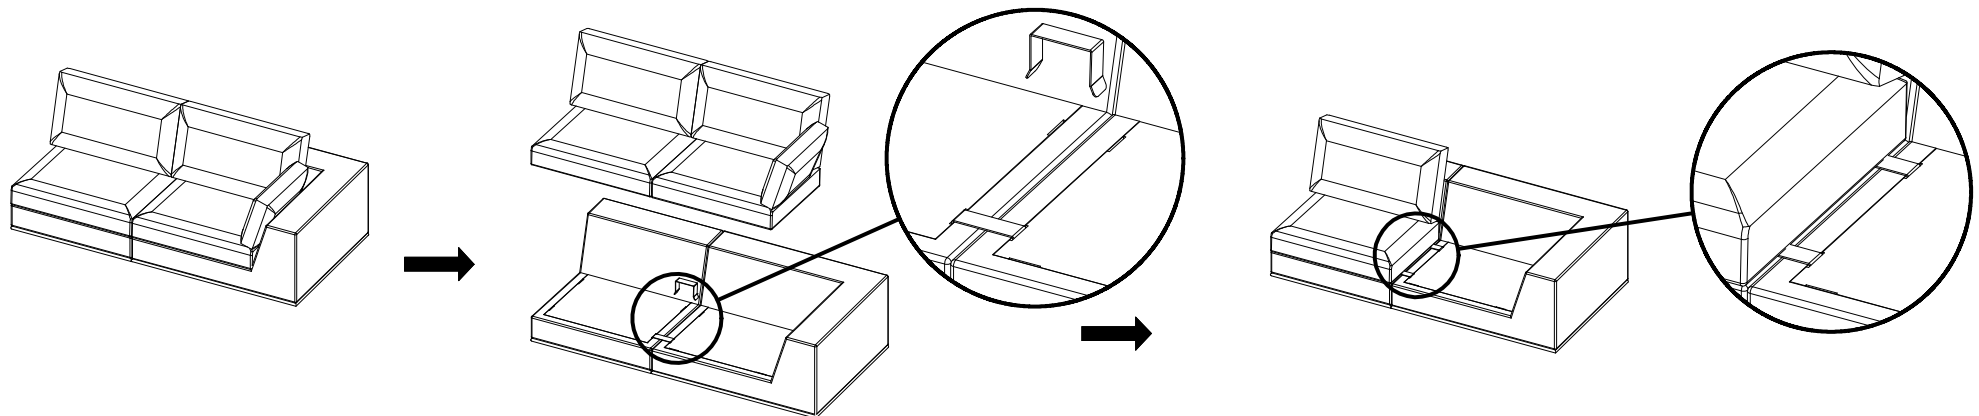




ASSEMBLY INSTRUCTION PERRY COMPONENTS MD821

CORNER + ARMLESS

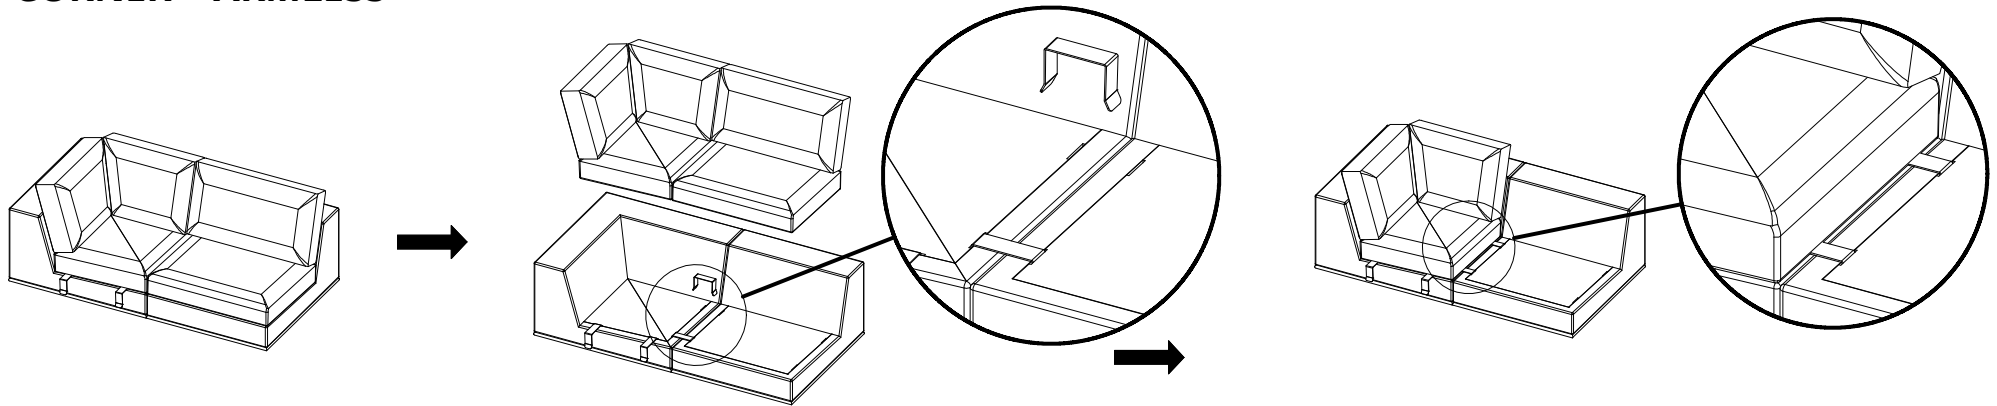


OTTOMAN + ARM CHAIR (OPTION 1)

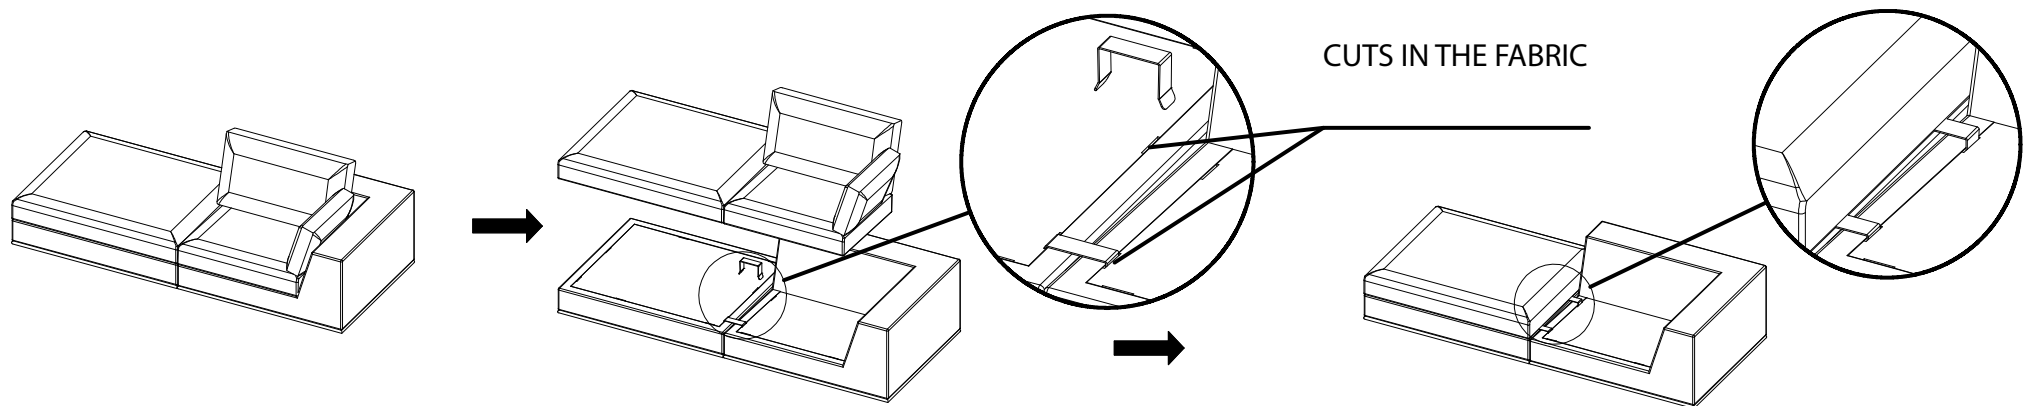



ASSEMBLY INSTRUCTION PERRY COMPONENTS MD821

OTTOMAN + ARM CHAIR (OPTION 2)

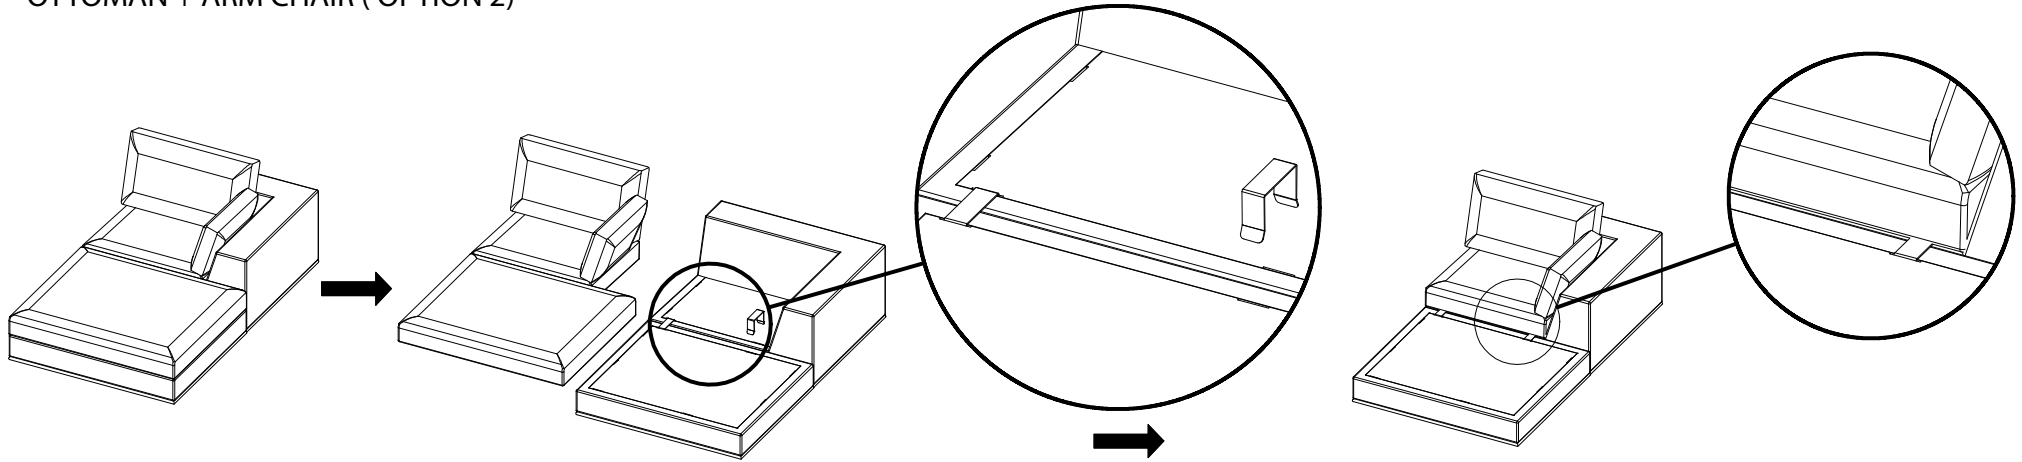

LEGS ASSEMBLY STEP 2

